5DV118 Computer Organization and Architecture Umeå University Department of Computing Science

Stephen J. Hegner

Topic 4: The Processor

Part B: Pipelining Hazards

These slides are mostly taken verbatim, or with minor changes, from those prepared by

Mary Jane Irwin (www.cse.psu.edu/~mji)

of The Pennsylvania State University

[Adapted from Computer Organization and Design, 4th Edition,

Patterson & Hennessy, © 2008, MK]


Key to the Slides

- The source of each slide is coded in the footer on the right side:
 - Irwin CSE331 = slide by Mary Jane Irwin from the course CSE331 (Computer Organization and Design) at Pennsylvania State University.
 - Irwin CSE431 = slide by Mary Jane Irwin from the course CSE431 (Computer Architecture) at Pennsylvania State University.
 - Hegner UU = slide by Stephen J. Hegner at Umeå University.


5DV118 20121126 t:4B sl:2 Hegner UU

Review: Why Pipeline? For Performance!



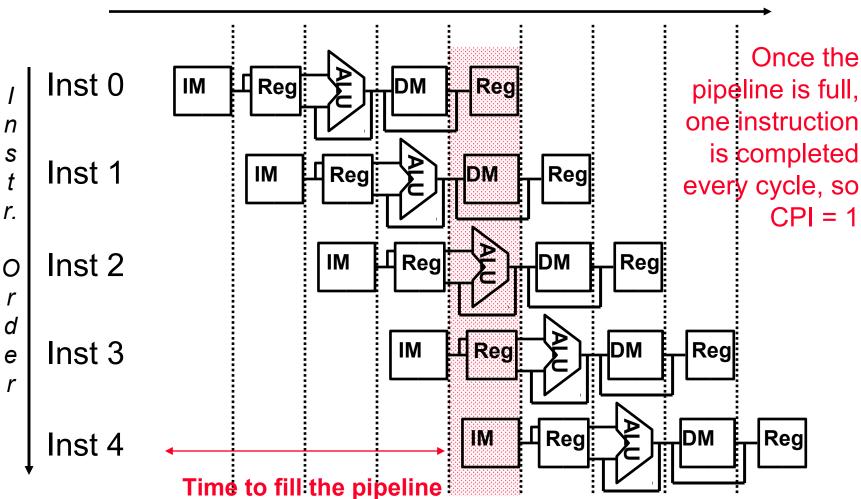

Review: MIPS Pipeline Data and Control Paths

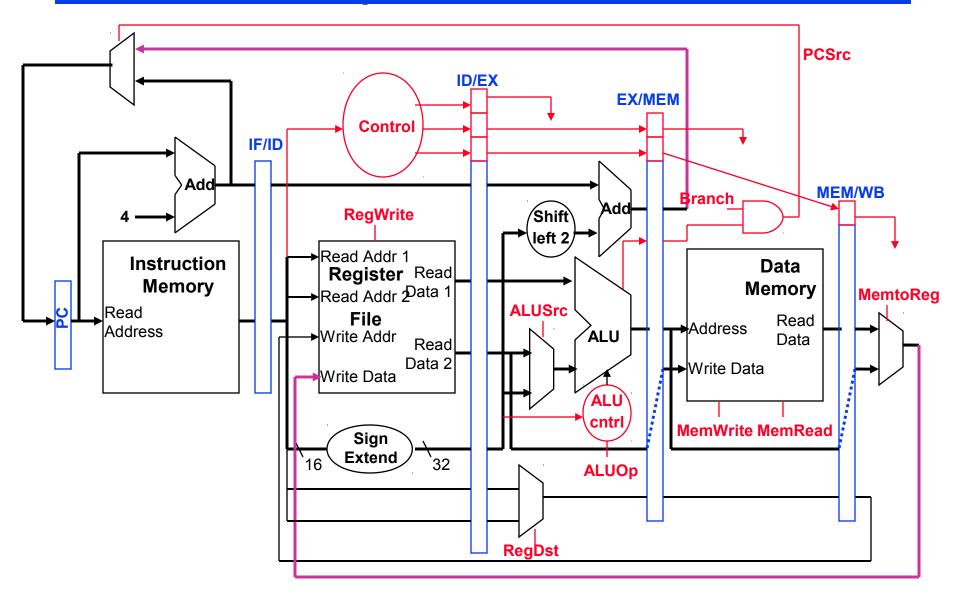

5DV118 20121126 t:4B sl:4 Irwin CSE431 PSU

Review: Can Pipelining Get Us Into Trouble?


- □ Yes: Pipeline Hazards
 - structural hazards: attempt to use the same resource by two different instructions at the same time
 - data hazards: attempt to use data before it is ready
 - An instruction's source operand(s) are produced by a prior instruction still in the pipeline
 - control hazards: attempt to make a decision about program control flow before the condition has been evaluated and the new PC target address calculated
 - branch and jump instructions, exceptions

Pipeline control must detect the hazard and then take action to resolve hazards


5DV118 20121126 t:4B sl:5

Review: Register Usage Can Cause Data Hazards

Read before write data hazard

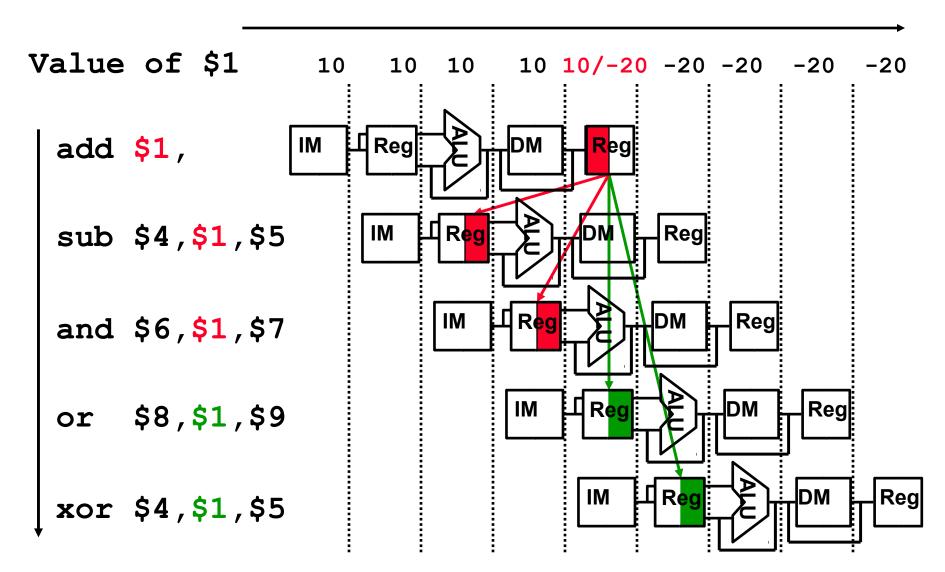


One Way to "Fix" a Data Hazard

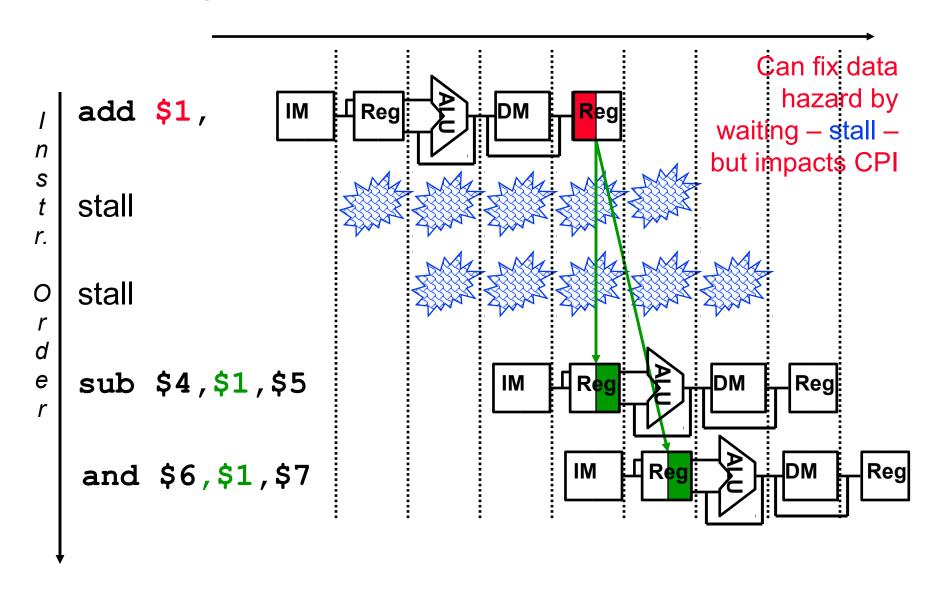


5DV118 20121126 t:4B sl:7

Another Way to "Fix" a Data Hazard

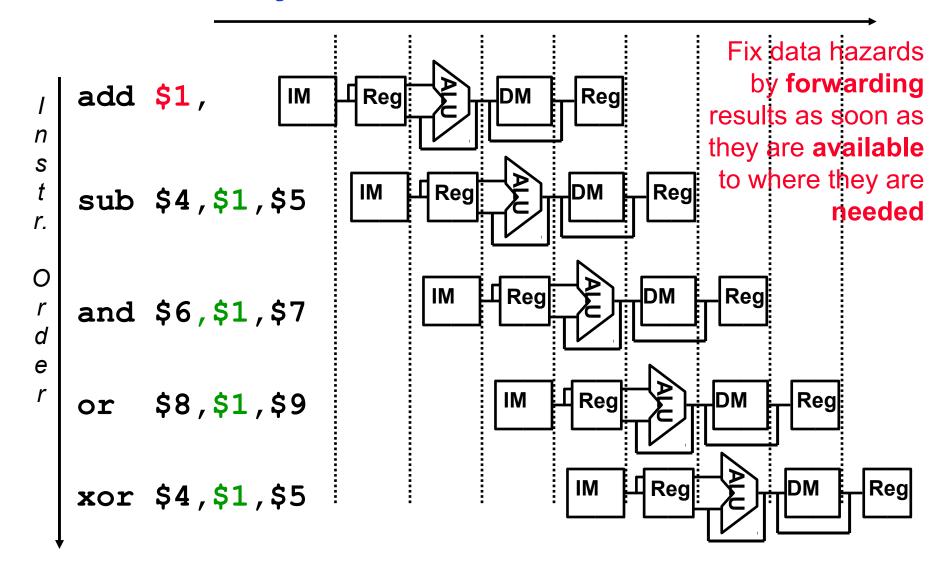

Another Way to "Fix" a Data Hazard

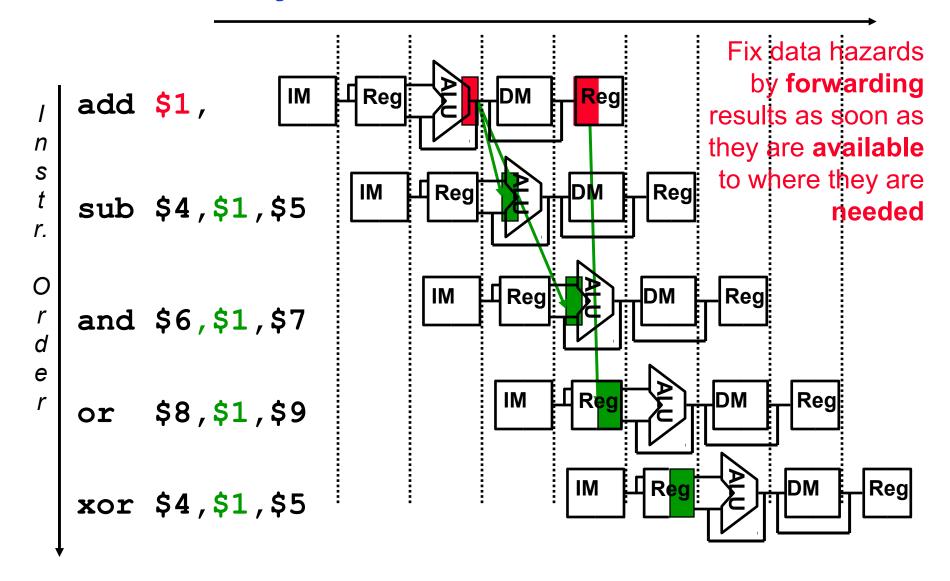

5DV118 20121126 t:4B sl:9 Irwin CSE431 PSU

Data Forwarding (aka Bypassing)

- Take the result from the earliest point that it exists in any of the pipeline state registers and forward it to the functional units (e.g., the ALU) that need it that cycle
- For ALU functional unit: the inputs can come from any pipeline register rather than just from ID/EX by
 - adding multiplexors to the inputs of the ALU
 - connecting the Rd write data in EX/MEM or MEM/WB to either (or both) of the EX's stage Rs and Rt ALU mux inputs
 - adding the proper control hardware to control the new muxes
- Other functional units may need similar forwarding logic (e.g., the DM)
- With forwarding can achieve a CPI of 1 even in the presence of data dependencies

Data Forwarding Control Conditions

1. EX Forward Unit:

```
if (EX/MEM.RegWrite
and (EX/MEM.RegisterRd != 0)
and (EX/MEM.RegisterRd = ID/EX.RegisterRs))
     ForwardA = 10
if (EX/MEM.RegWrite
and (EX/MEM.RegisterRd != 0)
and (EX/MEM.RegisterRd = ID/EX.RegisterRt))
    ForwardB = 10
```

Forwards the result from the previous instr. to either input of the ALU


1. MEM Forward Unit:

```
if (MEM/WB.RegWrite
and (MEM/WB.RegisterRd != 0)
and (MEM/WB.RegisterRd = ID/EX.RegisterRs))
         ForwardA = 01
if (MEM/WB.RegWrite
and (MEM/WB.RegisterRd != 0)
and (MEM/WB.RegisterRd = ID/EX.RegisterRt))
         ForwardB = 01
```

Forwards the result from the second previous instr. to either input of the ALU

5DV118 20121126 t;4B sl;11 Irwin CSE431 PSU

Forwarding Illustration

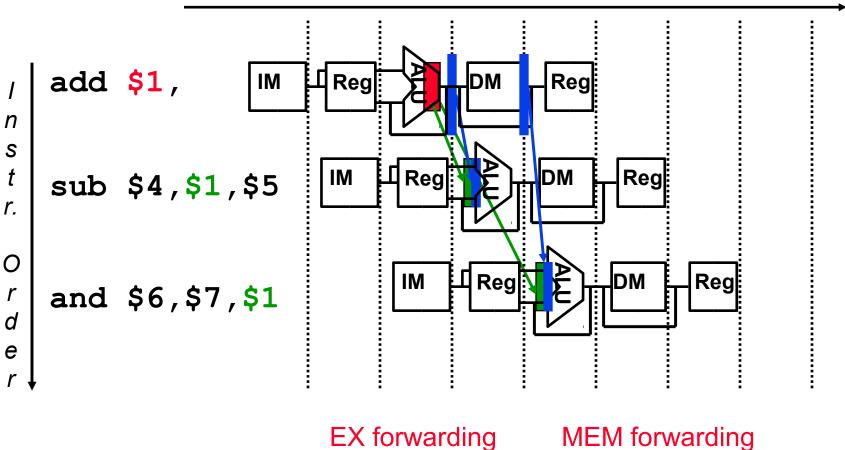


MEM forwarding

Irwin CSE431 PSU 5DV118 20121126 t:4B sl:12


Yet Another Complication!

Another potential data hazard can occur when there is a conflict between the result of the WB stage instruction and the MEM stage instruction – which should be forwarded?

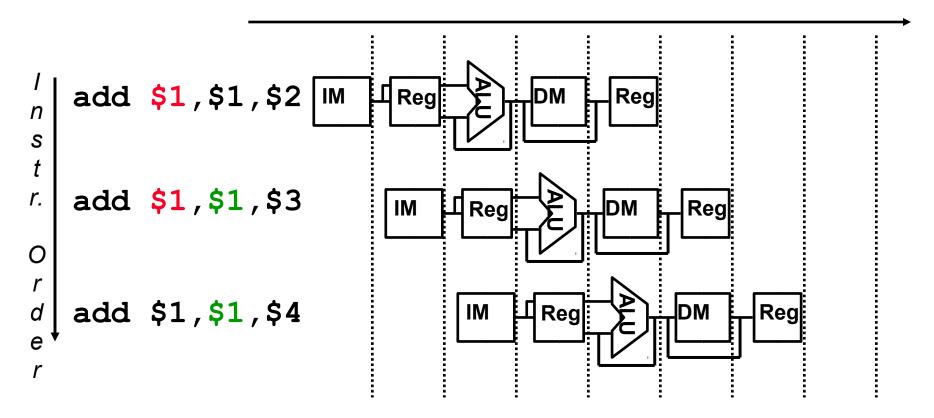

Yet Another Complication!

Another potential data hazard can occur when there is a conflict between the result of the WB stage instruction and the MEM stage instruction – which should be forwarded?

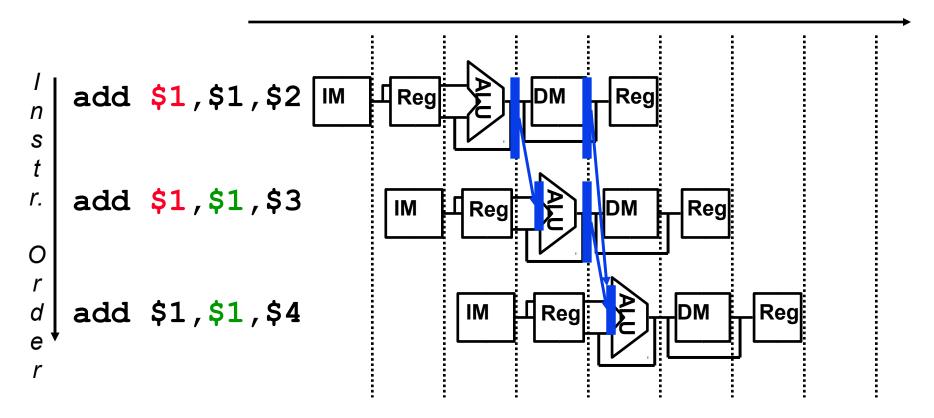

Corrected Data Forwarding Control Conditions

EX Forward Unit:

Forwards the result from the previous instr. to either input of the ALU


1. MEM Forward Unit:

```
if (MEM/WB.RegWrite
and (MEM/WB.RegisterRd != 0)
and (EX/MEM.RegisterRd != ID/EX.RegisterRs)
and (MEM/WB.RegisterRd = ID/EX.RegisterRs))
     ForwardA = 01


if (MEM/WB.RegWrite
and (MEM/WB.RegisterRd != 0)
and (EX/MEM.RegisterRd != ID/EX.RegisterRt)
and (MEM/WB.RegisterRd = ID/EX.RegisterRt)
ForwardB = 01
```

Forwards the result from the previous or second previous instr. to either input of the ALU

Datapath with Forwarding Hardware

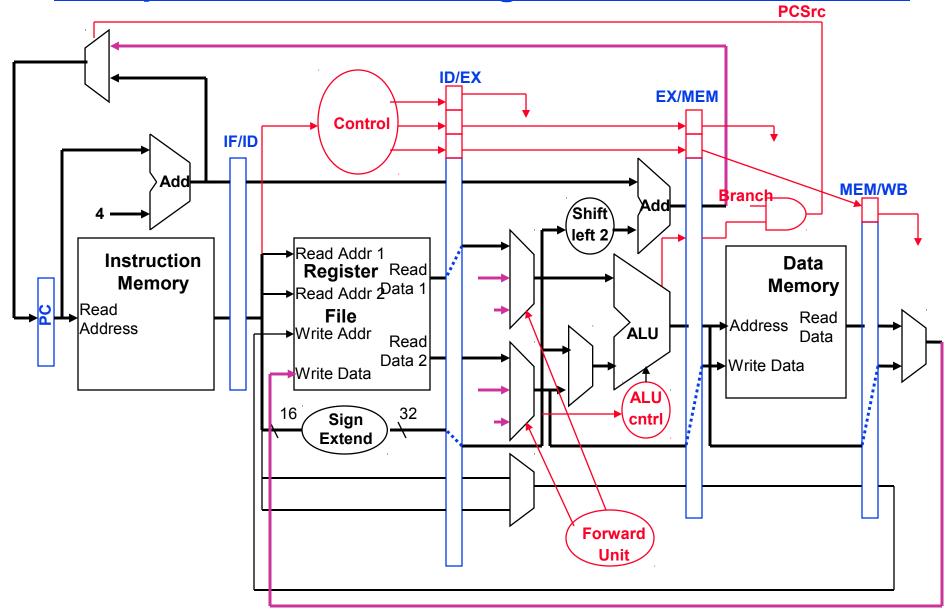


Datapath with Forwarding Hardware

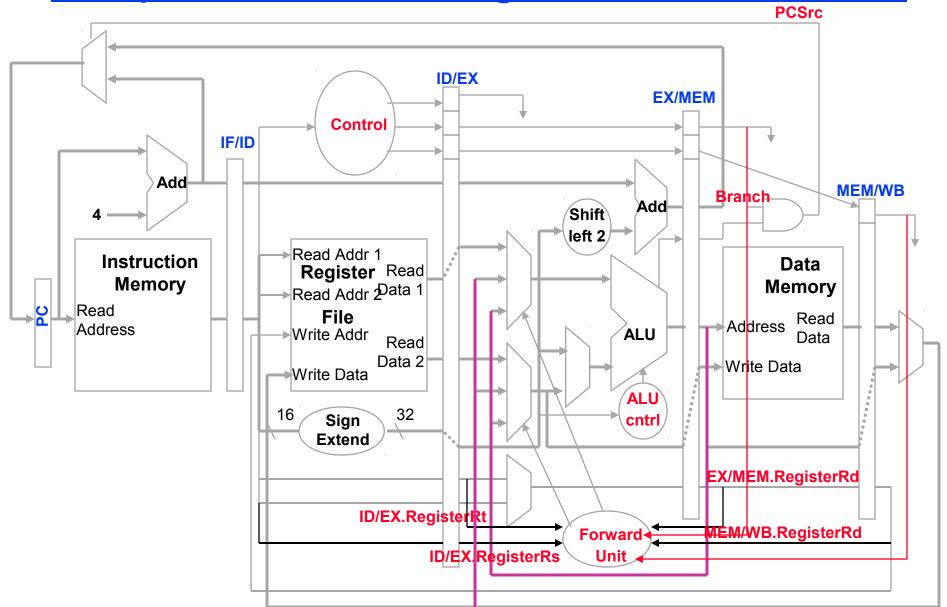


Memory-to-Memory Copies

- For loads immediately followed by stores (memory-to-memory copies) can avoid a stall by adding forwarding hardware from the MEM/WB register to the data memory input.
 - Would need to add a Forward Unit and a mux to the MEM stage

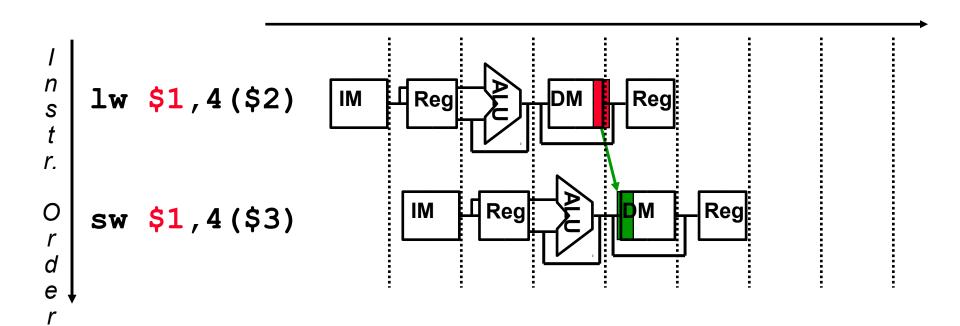


5DV118 20121126 t:4B sl:18 Irwin CSE431 PSU

Forwarding with Load-use Data Hazards

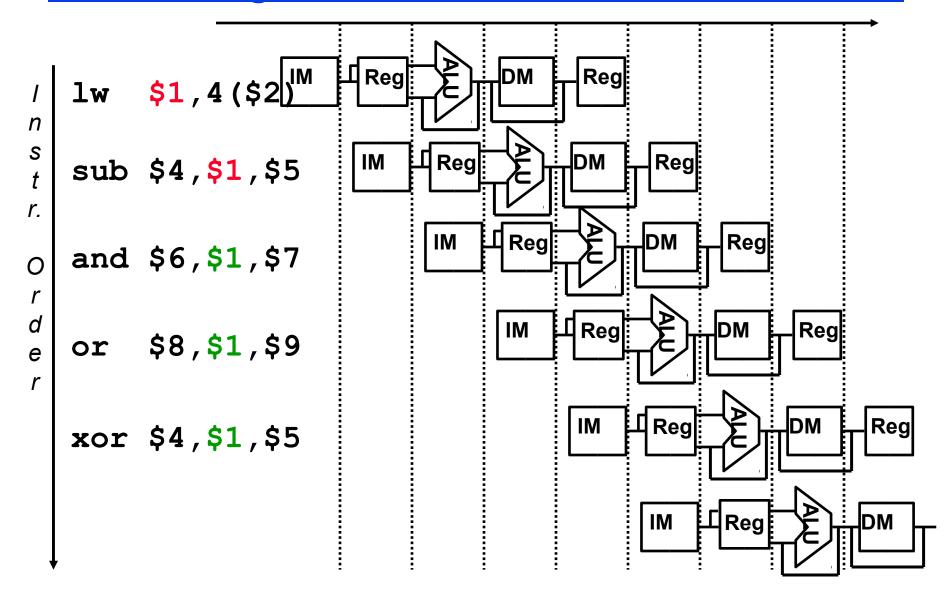

Forwarding with Load-use Data Hazards

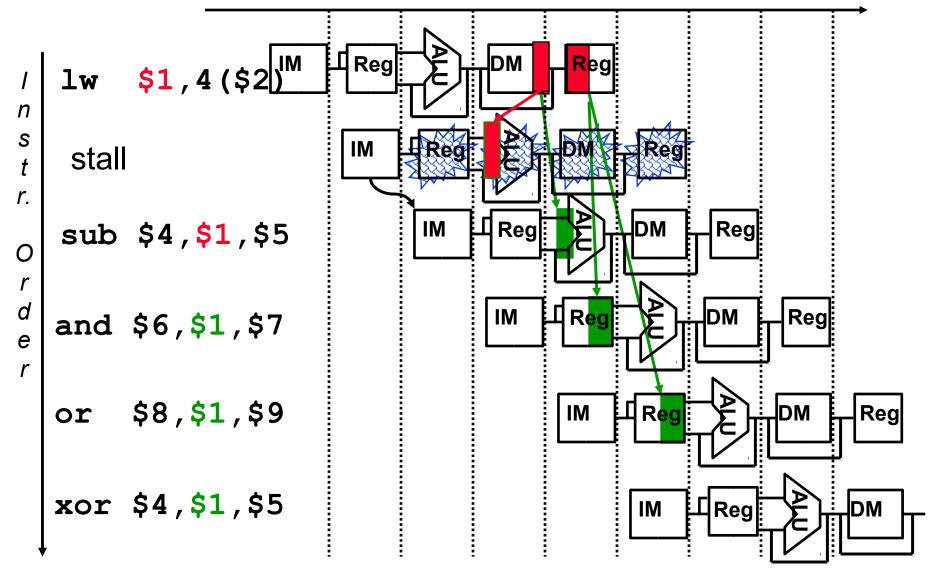

Will still need one stall cycle even with forwarding

Load-use Hazard Detection Unit

- Need a Hazard detection Unit in the ID stage that inserts a stall between the load and its use
 - 1. ID Hazard detection Unit:

```
if (ID/EX.MemRead
and ((ID/EX.RegisterRt = IF/ID.RegisterRs)
or (ID/EX.RegisterRt = IF/ID.RegisterRt)))
stall the pipeline
```

- □ The first line tests to see if the instruction now in the EX stage is a lw; the next two lines check to see if the destination register of the lw matches either source register of the instruction in the ID stage (the load-use instruction)
- After this one cycle stall, the forwarding logic can handle the remaining data hazards


5DV118 20121126 t:4B sl:21 Irwin CSE431 PSU

Hazard/Stall Hardware


- Along with the Hazard Unit, we have to implement the stall
- Prevent the instructions in the IF and ID stages from progressing down the pipeline – done by preventing the PC register and the IF/ID pipeline register from changing
 - Hazard detection Unit controls the writing of the PC (PC.write) and IF/ID (IF/ID.write) registers
- □ Insert a "bubble" between the lw instruction (in the EX stage) and the load-use instruction (in the ID stage) (i.e., insert a noop in the execution stream)
 - Set the control bits in the EX, MEM, and WB control fields of the ID/EX pipeline register to 0 (noop). The Hazard Unit controls the mux that chooses between the real control values and the 0's.
- Let the lw instruction and the instructions after it in the pipeline (before it in the code) proceed normally down the pipeline

5DV118 20121126 t:4B sl:22 Irwin CSE431 PSU

Adding the Hazard/Stall Hardware

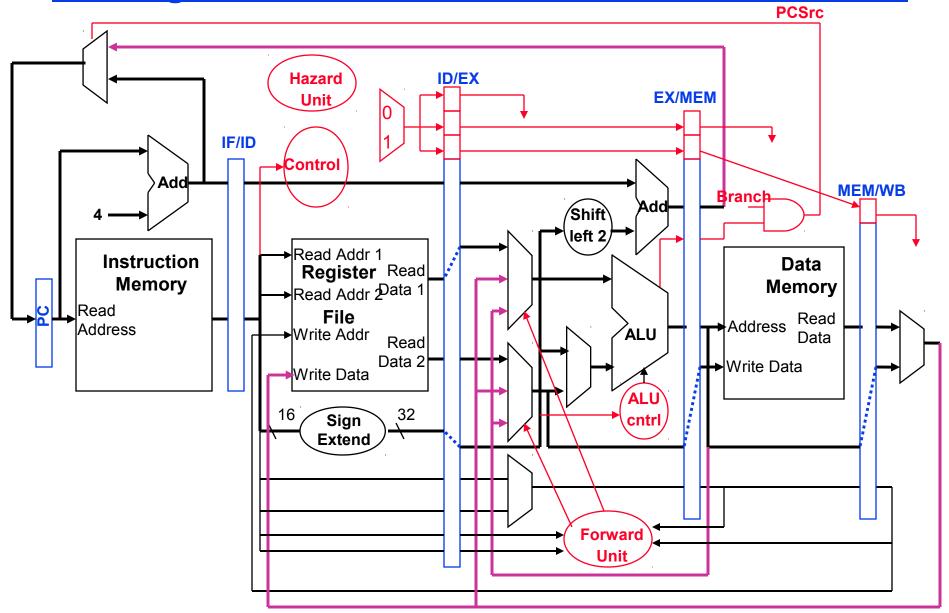

Adding the Hazard/Stall Hardware

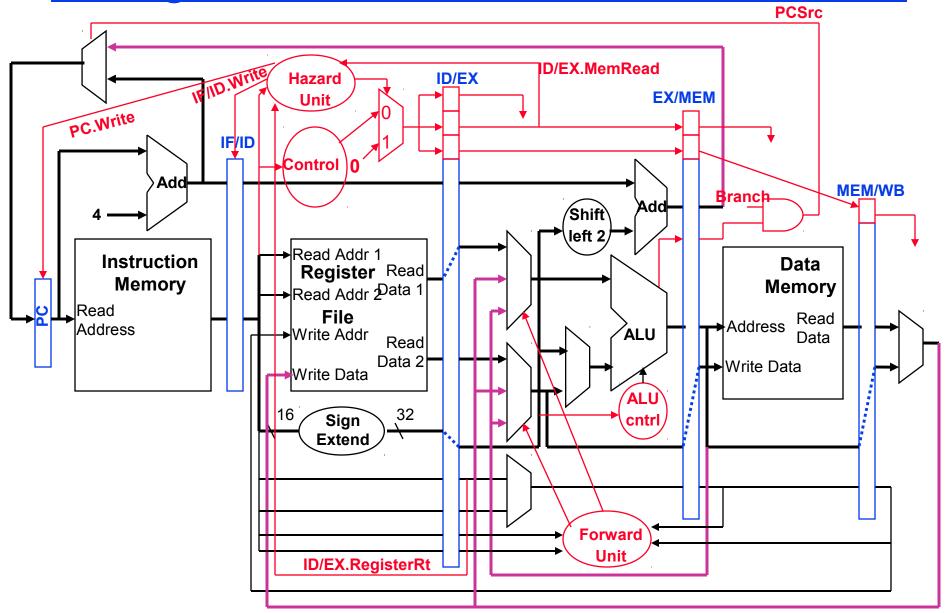


Control Hazards

- □ When the flow of instruction addresses is not sequential (i.e., PC = PC + 4); incurred by change of flow instructions
 - Unconditional branches (j, jal, jr)
 - Conditional branches (beq, bne)
 - Exceptions
- Possible approaches
 - Stall (impacts CPI)
 - Move decision point as early in the pipeline as possible, thereby reducing the number of stall cycles
 - Delay decision (requires compiler support)
 - Predict and hope for the best!
- Control hazards occur less frequently than data hazards, but there is *nothing* as effective against control hazards as forwarding is for data hazards


5DV118 20121126 t:4B sl:25 Irwin CSE431 PSU

Datapath Branch and Jump Hardware

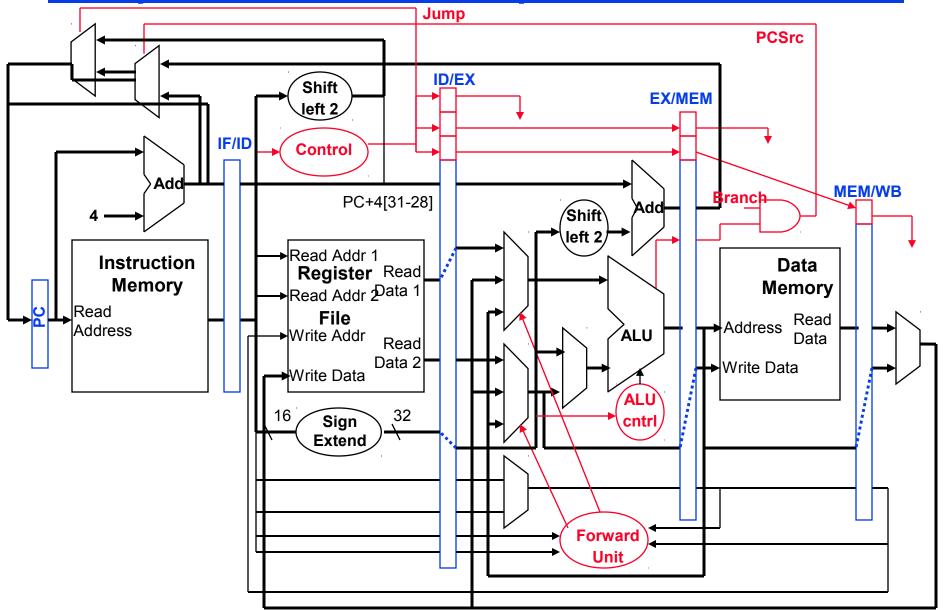

Jumps Incur One Stall

- Jumps not decoded until ID, so one flush is needed
 - To flush, set IF.Flush to zero the instruction field of the IF/ID pipeline register (turning it into a noop)

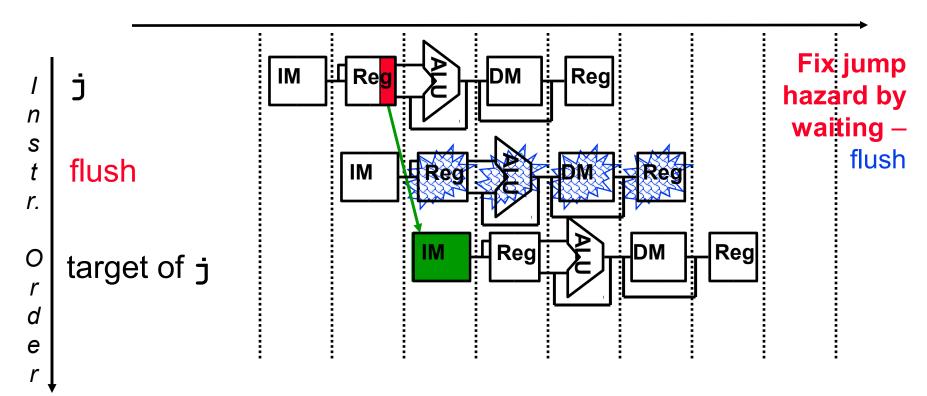


Fortunately, jumps are very infrequent – only 3% of the SPECint instruction mix

5DV118 20121126 t:4B sl:27 Irwin CSE431 PSU

Two "Types" of Stalls


- Noop instruction (or bubble) inserted between two instructions in the pipeline (as done for load-use situations)
 - Keep the instructions earlier in the pipeline (later in the code) from progressing down the pipeline for a cycle ("bounce" them in place with write control signals)
 - Insert noop by zeroing control bits in the pipeline register at the appropriate stage
 - Let the instructions later in the pipeline (earlier in the code) progress normally down the pipeline
- □ Flushes (or instruction squashing) where an instruction in the pipeline is replaced with a noop instruction (as done for instructions located sequentially after j instructions)
 - Zero the control bits for the instruction to be flushed

Supporting ID Stage Jumps

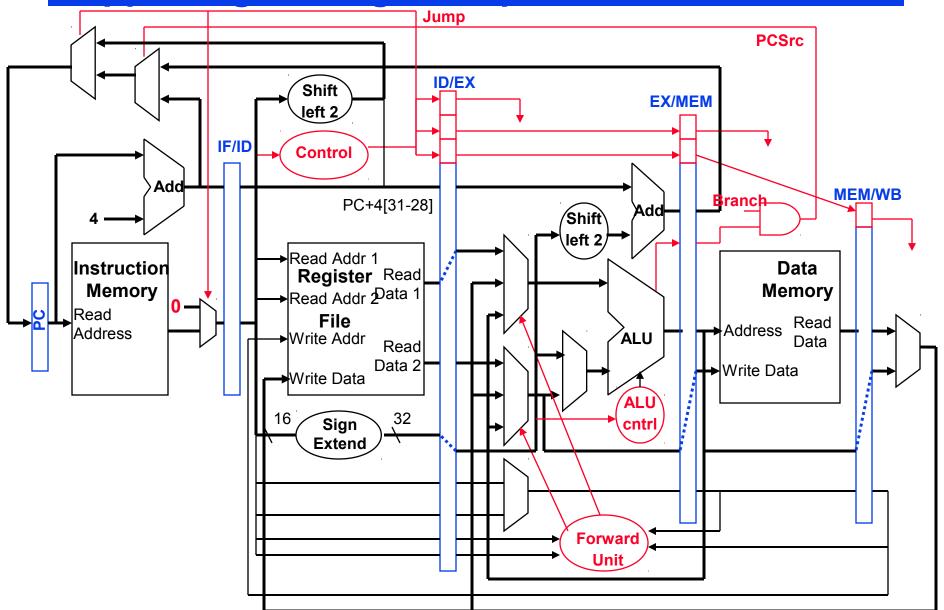


Review: Branch Instr's Cause Control Hazards

Dependencies backward in time cause hazards

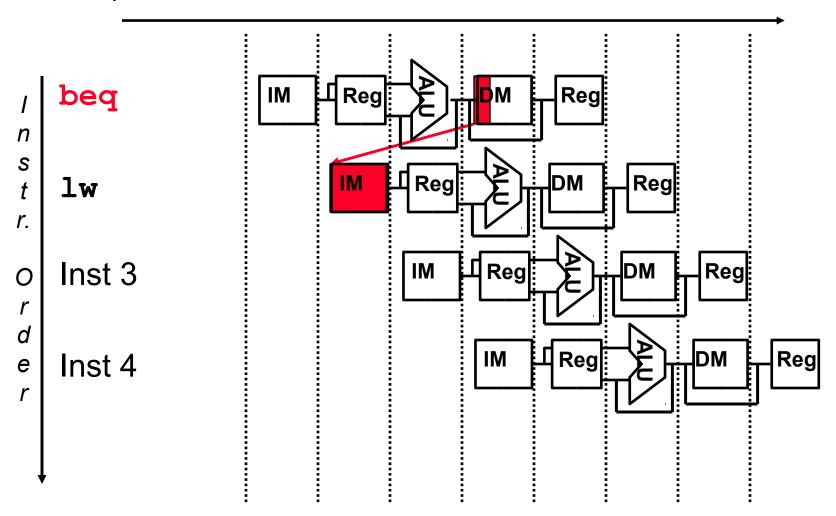

5DV118 20121126 t:4B sl:30 Irwin CSE431 PSU


One Way to "Fix" a Branch Control Hazard

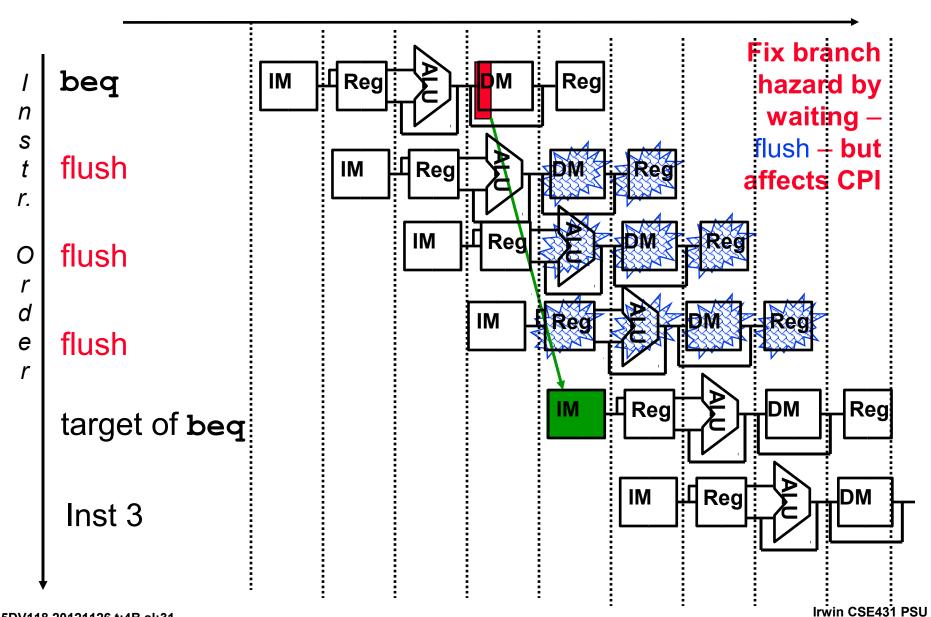

5DV118 20121126 t:4B sl:31

Another Way to "Fix" a Branch Control Hazard

■ Move branch decision hardware back to as early in the pipeline as possible – i.e., during the decode cycle

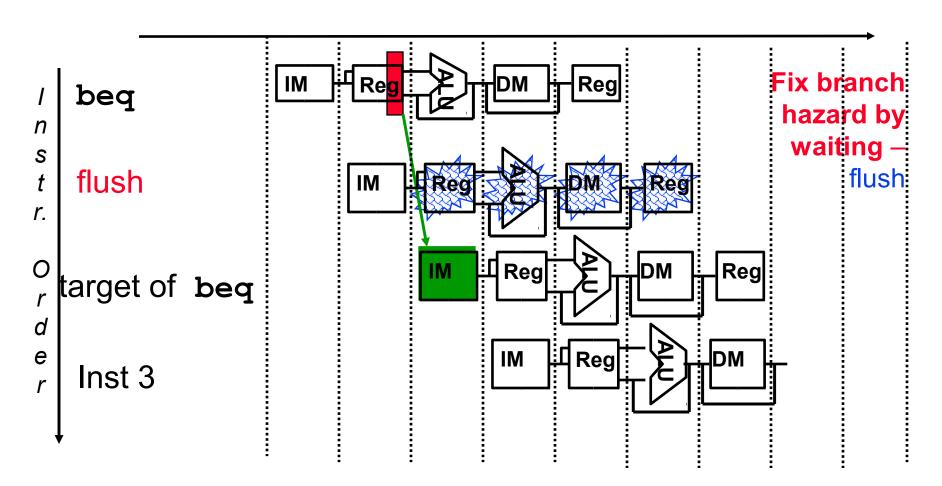

5DV118 20121126 t:4B sl:32 Irwin CSE431 PSU

Reducing the Delay of Branches

- Move the branch decision hardware back to the EX stage
 - Reduces the number of stall (flush) cycles to two
 - Adds an and gate and a 2x1 mux to the EX timing path
- Add hardware to compute the branch target address and evaluate the branch decision to the ID stage
 - Reduces the number of stall (flush) cycles to one (like with jumps)
 - But now need to add forwarding hardware in ID stage
 - Computing branch target address can be done in parallel with RegFile read (done for all instructions – only used when needed)
 - Comparing the registers can't be done until after RegFile read, so comparing and updating the PC adds a mux, a comparator, and an and gate to the ID timing path
- For deeper pipelines, branch decision points can be even later in the pipeline, incurring more stalls

5DV118 20121126 t:4B sl:33 Irwin CSE431 PSU

ID Branch Forwarding Issues

MEM/WB "forwarding" is taken care of by the normal RegFile write before read operation

```
WB add3 $1,

MEM add2 $3,

EX add1 $4,

ID beq $1,$2,Loop

IF next seq instr
```

Need to forward from the EX/MEM pipeline stage to the ID comparison hardware for cases like

```
WB add3 $3,

MEM add2 $1,

EX add1 $4,

ID beq $1,$2,Loop

IF next seq instr
```

Forwards the result from the second previous instr. to either input of the compare

ID Branch Forwarding Issues, con't

□ If the instruction immediately before the branch produces one of the branch source operands, then a stall needs to be inserted (between the

```
WB add3 $3,

MEM add2 $4,

EX add1 $1,


ID beq $1,$2,Loop

IF next_seq_instr
```

beq and add1) since the EX stage ALU operation is occurring at the same time as the ID stage branch compare operation

- "Bounce" the beq (in ID) and next_seq_instr (in IF) in place (ID Hazard Unit deasserts PC.Write and IF/ID.Write)
- Insert a stall between the add in the EX stage and the beq in the ID stage by zeroing the control bits going into the ID/EX pipeline register (done by the ID Hazard Unit)
- If the branch is found to be taken, then flush the instruction currently in IF (IF.Flush)

Supporting ID Stage Branches

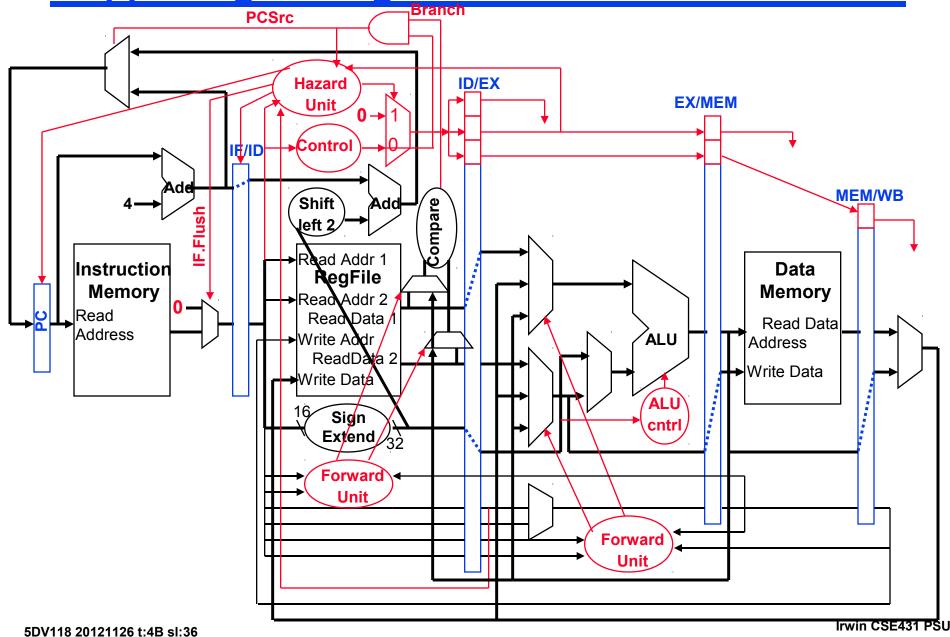

Delayed Branches


- □ If the branch hardware has been moved to the ID stage, then we can eliminate all branch stalls with delayed branches which are defined as always executing the next sequential instruction after the branch instruction the branch takes effect after that next instruction
 - MIPS compiler moves an instruction to immediately after the branch that is not affected by the branch (a safe instruction) thereby hiding the branch delay

- With deeper pipelines, the branch delay grows requiring more than one delay slot
 - Delayed branches have lost popularity compared to more expensive but more flexible (dynamic) hardware branch prediction
 - Growth in available transistors has made hardware branch prediction relatively cheaper


5DV118 20121126 t:4B sl:37 Irwin CSE431 PSU

Scheduling Branch Delay Slots


A. From before branch

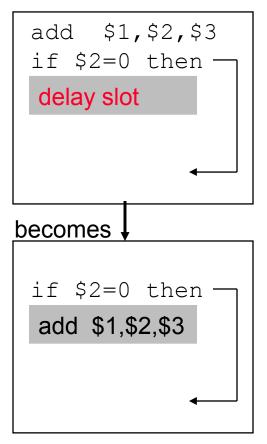

B. From branch target

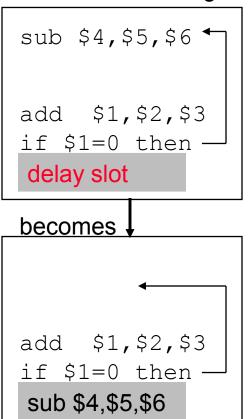

C. From fall through

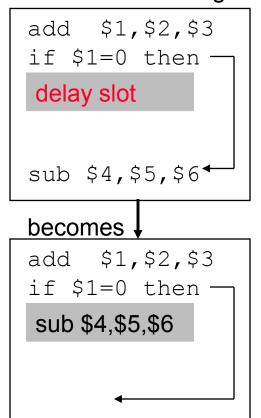


- □ A is the best choice, fills delay slot and reduces IC
- □ In B and C, the sub instruction may need to be copied, increasing IC
- □ In B and C, must be okay to execute sub when branch fails

Static Branch Prediction

- Resolve branch hazards by assuming a given outcome and proceeding without waiting to see the actual branch outcome
- Predict not taken always predict branches will not be taken, continue to fetch from the sequential instruction stream, only when branch is taken does the pipeline stall
 - If taken, flush instructions after the branch (earlier in the pipeline)
 - in IF, ID, and EX stages if branch logic in MEM three stalls
 - In IF and ID stages if branch logic in EX two stalls
 - in IF stage if branch logic in ID one stall
 - ensure that those flushed instructions haven't changed the machine state – automatic in the MIPS pipeline since machine state changing operations are at the tail end of the pipeline (MemWrite (in MEM) or RegWrite (in WB))
 - restart the pipeline at the branch destination

5DV118 20121126 t:4B sl:39 Irwin CSE431 PSU


Flushing with Misprediction (Not Taken)

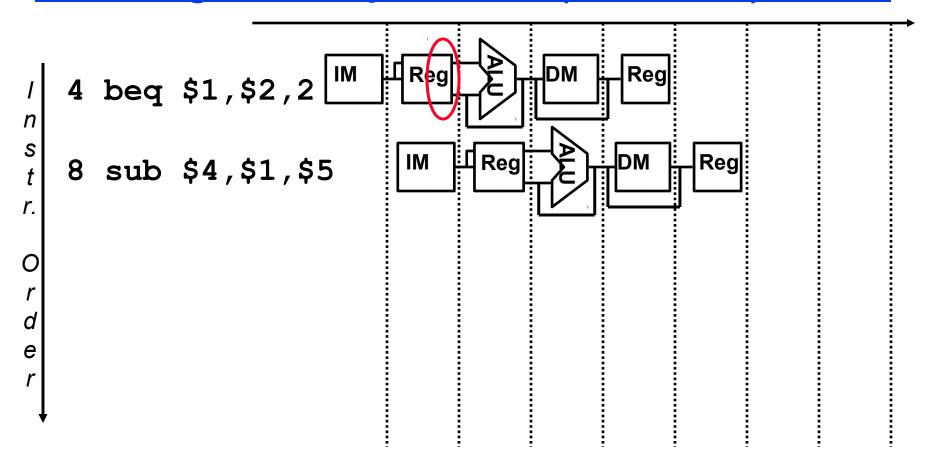

To flush the IF stage instruction, assert IF.Flush to zero the instruction field of the IF/ID pipeline register (transforming it into a noop)

5DV118 20121126 t:4B sl:40 Irwin CSE431 PSU

Flushing with Misprediction (Not Taken)

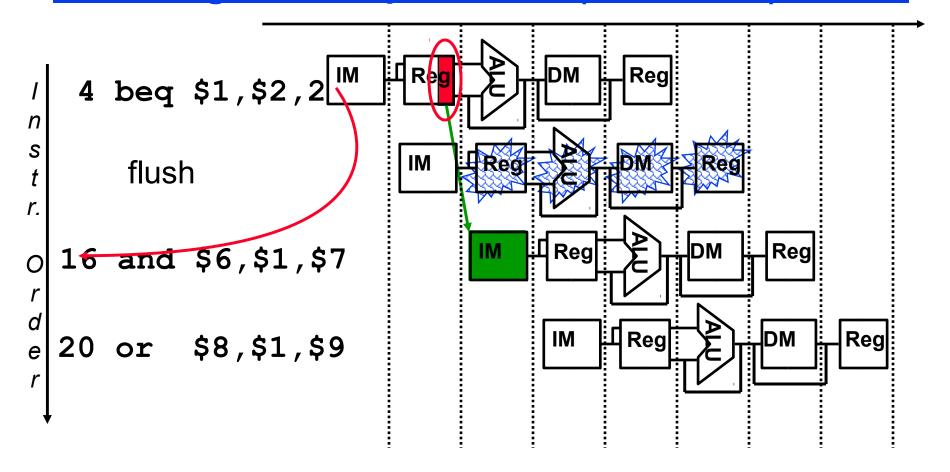

To flush the IF stage instruction, assert IF.Flush to zero the instruction field of the IF/ID pipeline register (transforming it into a noop)

5DV118 20121126 t:4B sl:41 Irwin CSE431 PSU

Branching Structures

Predict not taken works well for "top of the loop" branching structures

 But such loops have jumps at the bottom of the loop to return to the top of the loop – and incur the jump stall overhead

□ Predict not taken doesn't work well for "bottom of the loop" branching structures
□ Predict not taken doesn't work well for "bottom of the loop" branching structures

```
Loop: 1st loop instr
2nd loop instr

.
.
.
last loop instr
bne $1,$2,Loop
fall out instr
```

Static Branch Prediction, con't

- Resolve branch hazards by assuming a given outcome and proceeding
- Predict taken predict branches will always be taken
 - Predict taken always incurs one stall cycle (if branch destination hardware has been moved to the ID stage)
 - Is there a way to "cache" the address of the branch target instruction ??
- As the branch penalty increases (for deeper pipelines), a simple static prediction scheme will hurt performance. With more hardware, it is possible to try to predict branch behavior dynamically during program execution
- Dynamic branch prediction predict branches at runtime using run-time information

5DV118 20121126 t:4B sl:43 Irwin CSE431 PSU

Dynamic Branch Prediction


- □ A branch prediction buffer (aka branch history table (BHT)) in the IF stage addressed by the lower bits of the PC, contains bit(s) passed to the ID stage through the IF/ID pipeline register that tells whether the branch was taken the last time it was executed
 - Prediction bit may predict incorrectly (may be a wrong prediction for this branch this iteration or may be from a different branch with the same low order PC bits) but that doesn't affect correctness, just performance
 - Branch decision occurs in the ID stage after determining that the fetched instruction is a branch and checking the prediction bit(s)
 - If the prediction is wrong, flush the incorrect instruction(s) in pipeline, restart the pipeline with the right instruction, and invert the prediction bit(s)
 - A 4096 bit BHT varies from 1% misprediction (nasa7, tomcatv) to 18% (eqntott)

5DV118 20121126 t:4B sl:44 Irwin CSE431 PSU

Branch Target Buffer

- □ The BHT predicts *when* a branch is taken, but does not tell *where* its taken to!
 - A branch target buffer (BTB) in the IF stage caches the branch target address, but we also need to fetch the next sequential instruction. The prediction bit in IF/ID selects which "next" instruction will be loaded into IF/ID at the next clock edge
 - Would need a two read port instruction memory

 Or the BTB can cache the branch taken instruction while the instruction memory is fetching the next sequential instruction

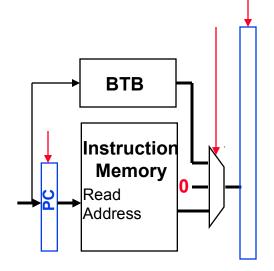

If the prediction is correct, stalls can be avoided no matter which direction they go

5DV118 20121126 t:4B sl:45 Irwin CSE431 PSU


1-bit Prediction Accuracy

- A 1-bit predictor will be incorrect twice when not taken
 - Assume predict_bit = 0 to start (indicating branch not taken) and loop control is at the bottom of the loop code
 - First time through the loop, the predictor mispredicts the branch since the branch is taken back to the top of the loop; invert prediction bit (predict_bit = 1)
 - As long as branch is taken (looping), prediction is correct
 - 3. Exiting the loop, the predictor again mispredicts the branch since this time the branch is not taken falling out of the loop; invert prediction bit (predict bit = 0)
- For 10 times through the loop we have a 80% prediction accuracy for a branch that is taken 90% of the time

fall out instr

2-bit Predictors


A 2-bit scheme can give 90% accuracy since a prediction must be wrong twice before the prediction bit is changed

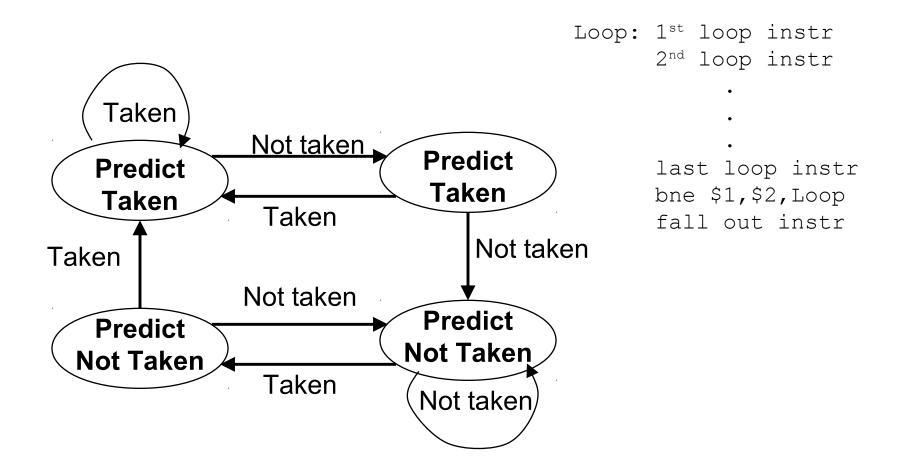

5DV118 20121126 t:4B sI:47 Irwin CSE431 PSU

2-bit Predictors

A 2-bit scheme can give 90% accuracy since a prediction must be wrong twice before the prediction bit is changed

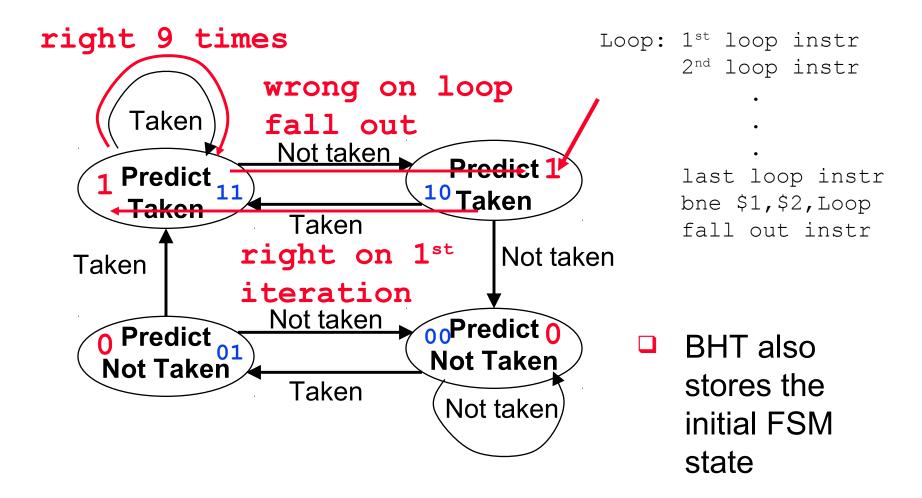

5DV118 20121126 t:4B sl:48 Irwin CSE431 PSU

Dealing with Exceptions

- Exceptions (aka interrupts) are just another form of control hazard. Exceptions arise from
 - R-type arithmetic overflow
 - Trying to execute an undefined instruction
 - An I/O device request
 - An OS service request (e.g., a page fault, TLB exception)
 - A hardware malfunction
- □ The pipeline has to stop executing the offending instruction in midstream, let all prior instructions complete, flush all following instructions, set a register to show the cause of the exception, save the address of the offending instruction, and then jump to a prearranged address (the address of the exception handler code)
- □ The software (OS) looks at the cause of the exception and "deals" with it


5DV118 20121126 t:4B sl:49 Irwin CSE431 PSU

Two Types of Exceptions

- Interrupts asynchronous to program execution
 - caused by external events
 - may be handled between instructions, so can let the instructions currently active in the pipeline complete before passing control to the OS interrupt handler
 - simply suspend and resume user program
- Traps (Exception) synchronous to program execution
 - caused by internal events
 - condition must be remedied by the trap handler for that instruction, so must stop the offending instruction midstream in the pipeline and pass control to the OS trap handler
 - the offending instruction may be retried (or simulated by the OS) and the program may continue or it may be aborted

5DV118 20121126 t:4B sI:50 | Irwin CSE431 PSU | Revised sih 20121126

Where in the Pipeline Exceptions Occur




Stage(s)?

Synchronous?

- Arithmetic overflow
- Undefined instruction
- TLB or page fault
- □ I/O service request
- Hardware malfunction

5DV118 20121126 t:4B sl:51 Irwin CSE431 PSU


Where in the Pipeline Exceptions Occur



	Stage(s)?	Synchronous?
Arithmetic overflow	EX	yes
Undefined instruction	ID	yes
TLB or page fault	IF, MEM	yes
□ I/O service request	any	no
Hardware malfunction	any	no

Beware that multiple exceptions can occur simultaneously in a single clock cycle


Multiple Simultaneous Exceptions

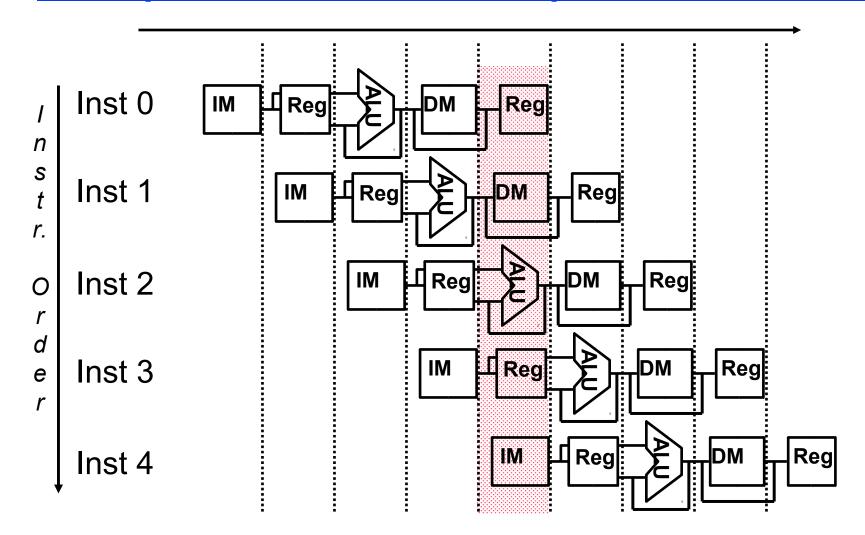

Hardware sorts the exceptions so that the earliest instruction is the one interrupted first

5DV118 20121126 t:4B sl:53

Multiple Simultaneous Exceptions

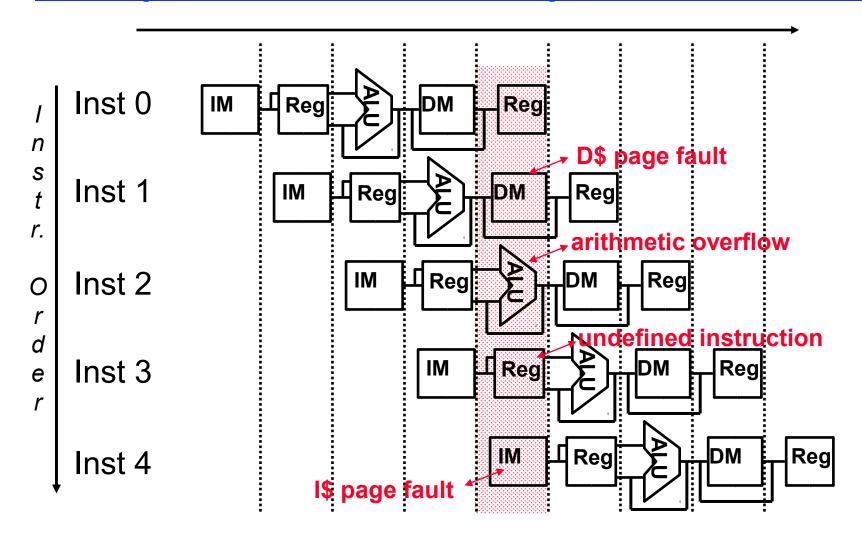

Hardware sorts the exceptions so that the earliest instruction is the one interrupted first


5DV118 20121126 t:4B sl:54 Irwin CSE431 PSU

Additions to MIPS to Handle Exceptions

- Cause register (records exceptions) hardware to record in Cause the exceptions and a signal to control writes to it (CauseWrite)
- EPC register (records the addresses of the offending instructions) – hardware to record in EPC the address of the offending instruction and a signal to control writes to it (EPCWrite)
 - Exception software must match exception to instruction
- A way to load the PC with the address of the exception handler
 - Expand the PC input mux where the new input is hardwired to the exception handler address - (e.g., 8000 0180_{hex} for arithmetic overflow)
- A way to flush offending instruction and the ones that follow it

5DV118 20121126 t:4B sl:55 Irwin CSE431 PSU

Datapath with Controls for Exceptions

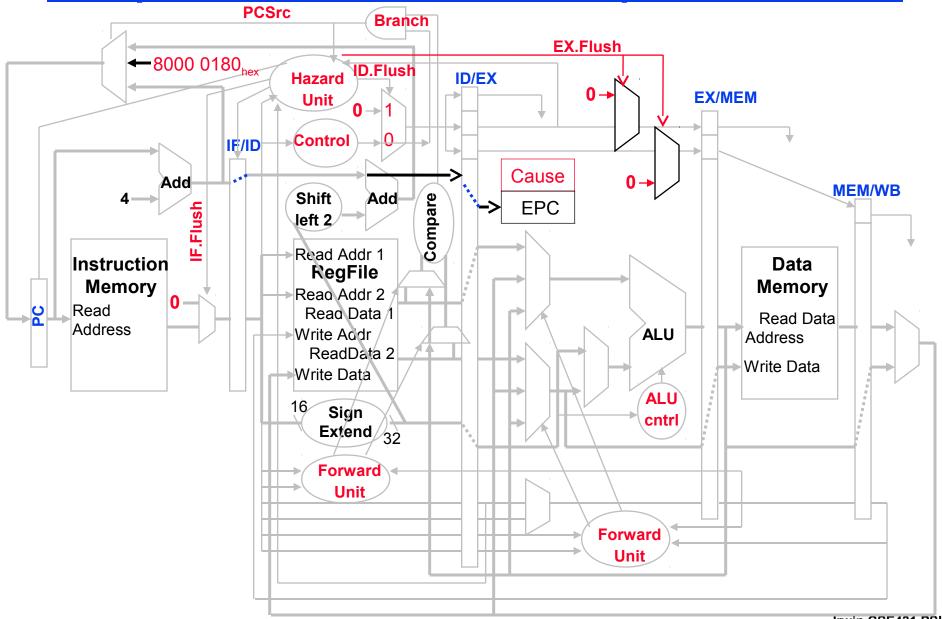

5DV118 20121126 t:4B sl:56

Irwin CSE431 PSU

Summary

- All modern day processors use pipelining for performance (a CPI of 1 and fast a CC)
- Pipeline clock rate limited by slowest pipeline stage so designing a balanced pipeline is important
- Must detect and resolve hazards
 - Structural hazards resolved by designing the pipeline correctly
 - Data hazards
 - Stall (impacts CPI)
 - Forward (requires hardware support)
 - Control hazards put the branch decision hardware in as early a stage in the pipeline as possible
 - Stall (impacts CPI)
 - Delay decision (requires compiler support)
 - Static and dynamic prediction (requires hardware support)
- Pipelining complicates exception handling

5DV118 20121126 t:4B sI:57 Irwin CSE431 PSU