
5DV118

Computer Organization and Architecture

Umeå University

Department of Computing Science

Stephen J. Hegner

Topic 1: Introduction

These slides are mostly taken verbatim, or with minor changes, from those prepared by

Mary Jane Irwin (www.cse.psu.edu/~mji)

of The Pennsylvania State University

[Adapted from *Computer Organization and Design, 4th Edition*,

Patterson & Hennessy, © 2008, MK]

Key to the Slides

- ❑ The source of each slide is coded in the footer on the right side:
 - **Irwin CSE331** = slide by Mary Jane Irwin from the course CSE331 (Computer Organization and Design) at Pennsylvania State University.
 - **Irwin CSE431** = slide by Mary Jane Irwin from the course CSE431 (Computer Architecture) at Pennsylvania State University.
 - **Hegner UU** = slide by Stephen J. Hegner at Umeå University.


Quote for the Day

“I got the idea for the mouse while attending a talk at a computer conference. The speaker was so boring that I started daydreaming and hit upon the idea.”

Doug Engelbart

http://en.wikipedia.org/wiki/Douglas_Engelbart

Intel 4004 Microprocessor

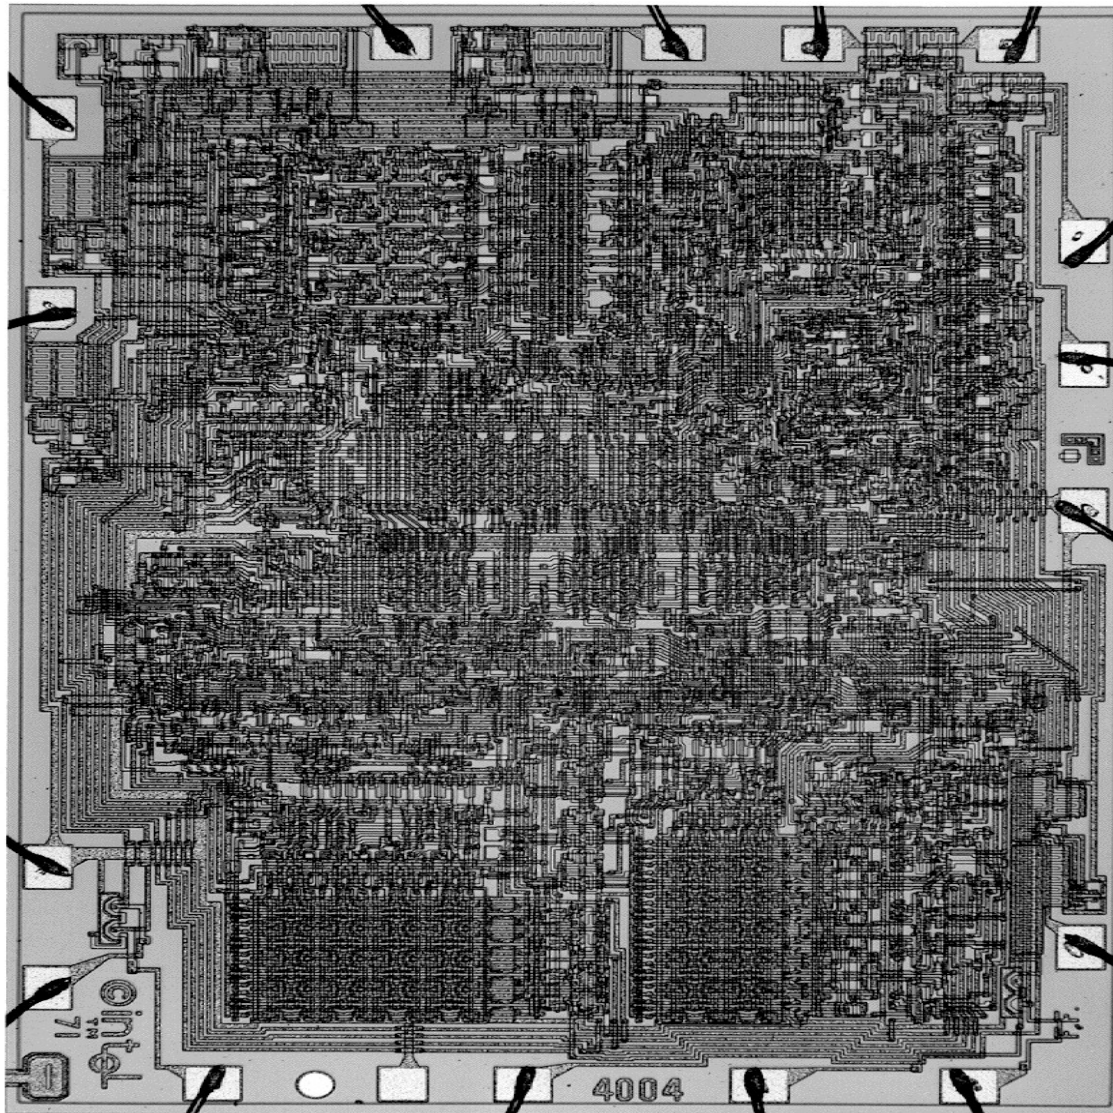

1971

0.2 MHz clock

3 mm² die



10,000 nm feature size

~2,300 transistors

2mW power

Moore's Law


In 1965, Intel's Gordon Moore predicted that the number of transistors that can be integrated on single chip would double about every two years

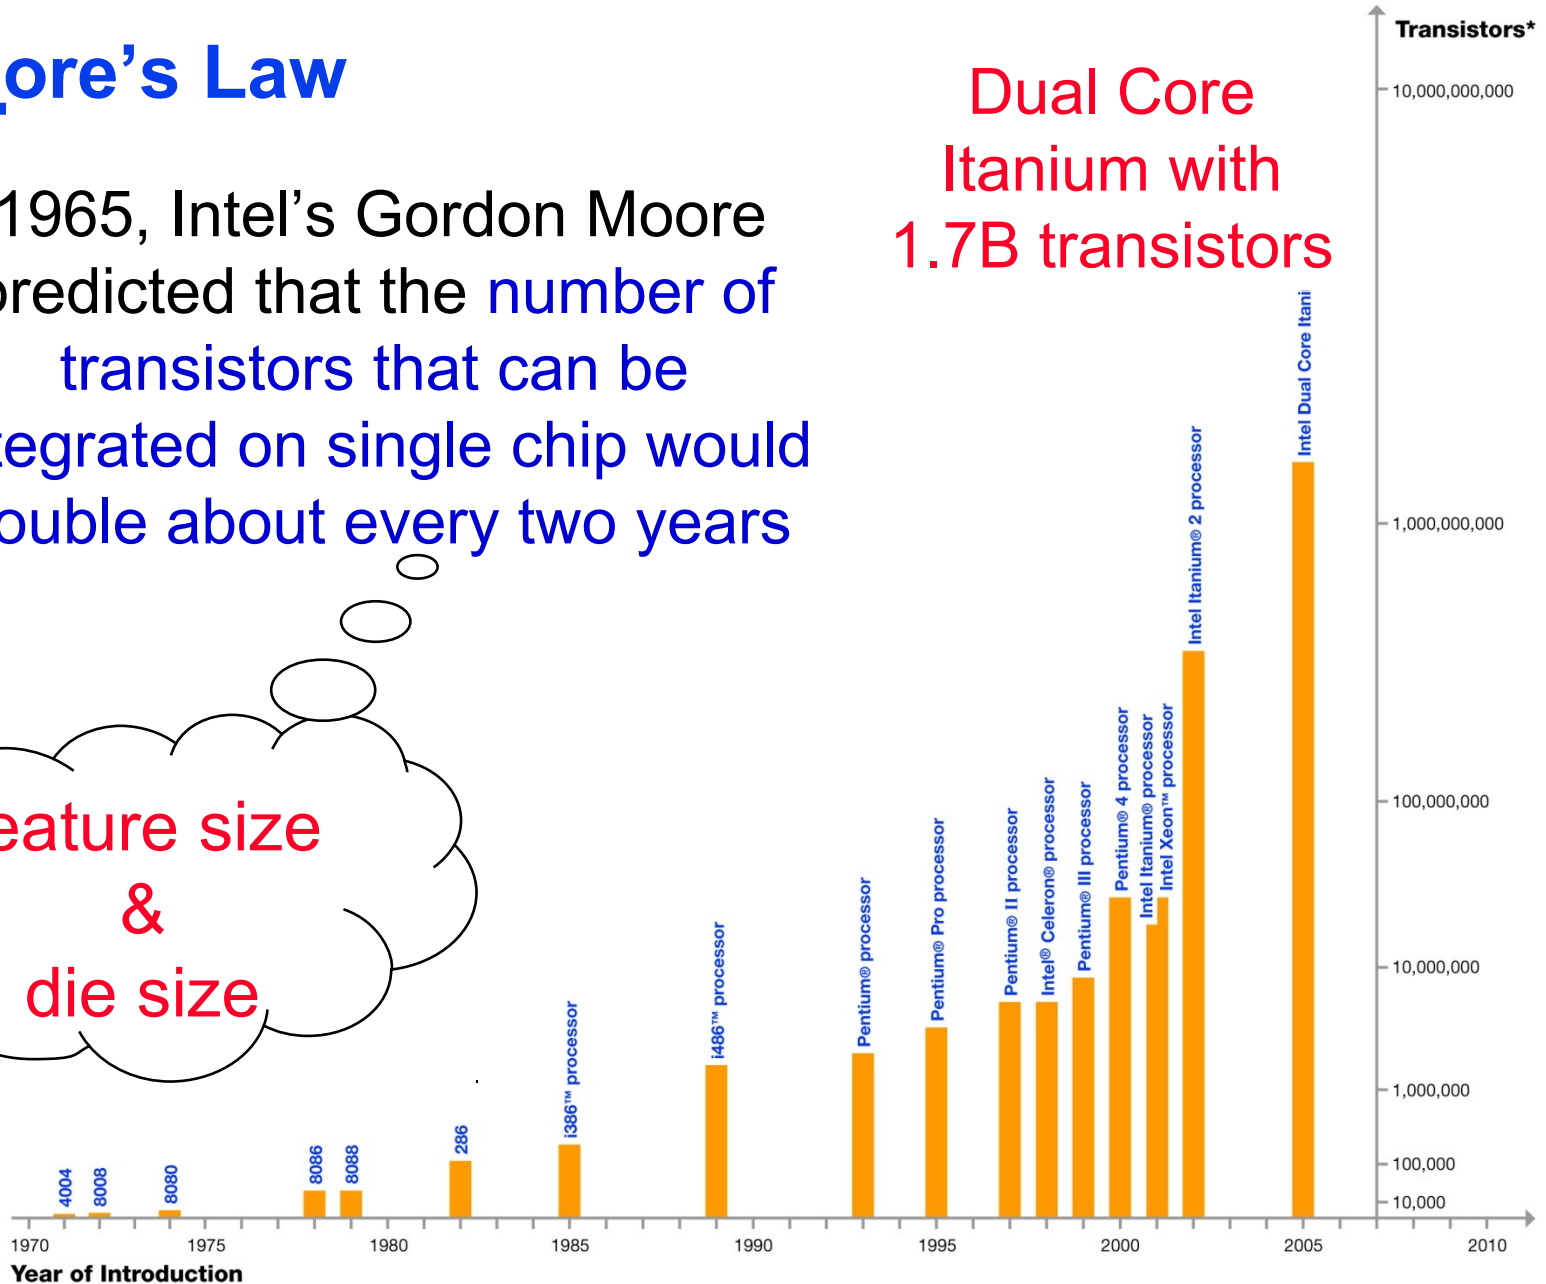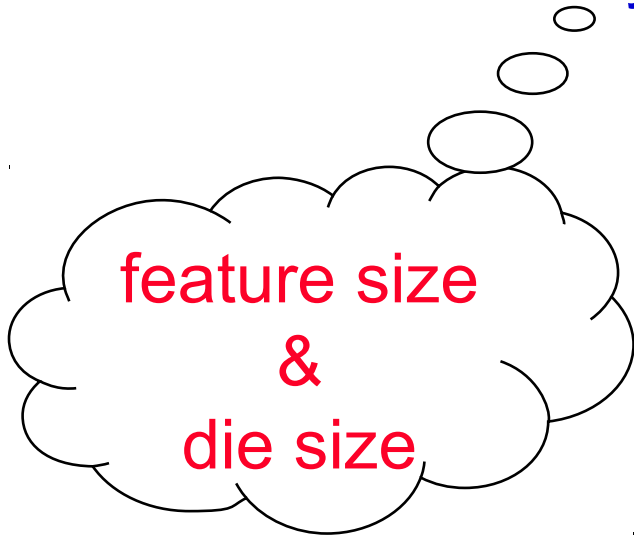

Dual Core
Itanium with
1.7B transistors

*Note: Vertical scale of chart not proportional to actual Transistor count.

Intel Pentium (IV) Microprocessor

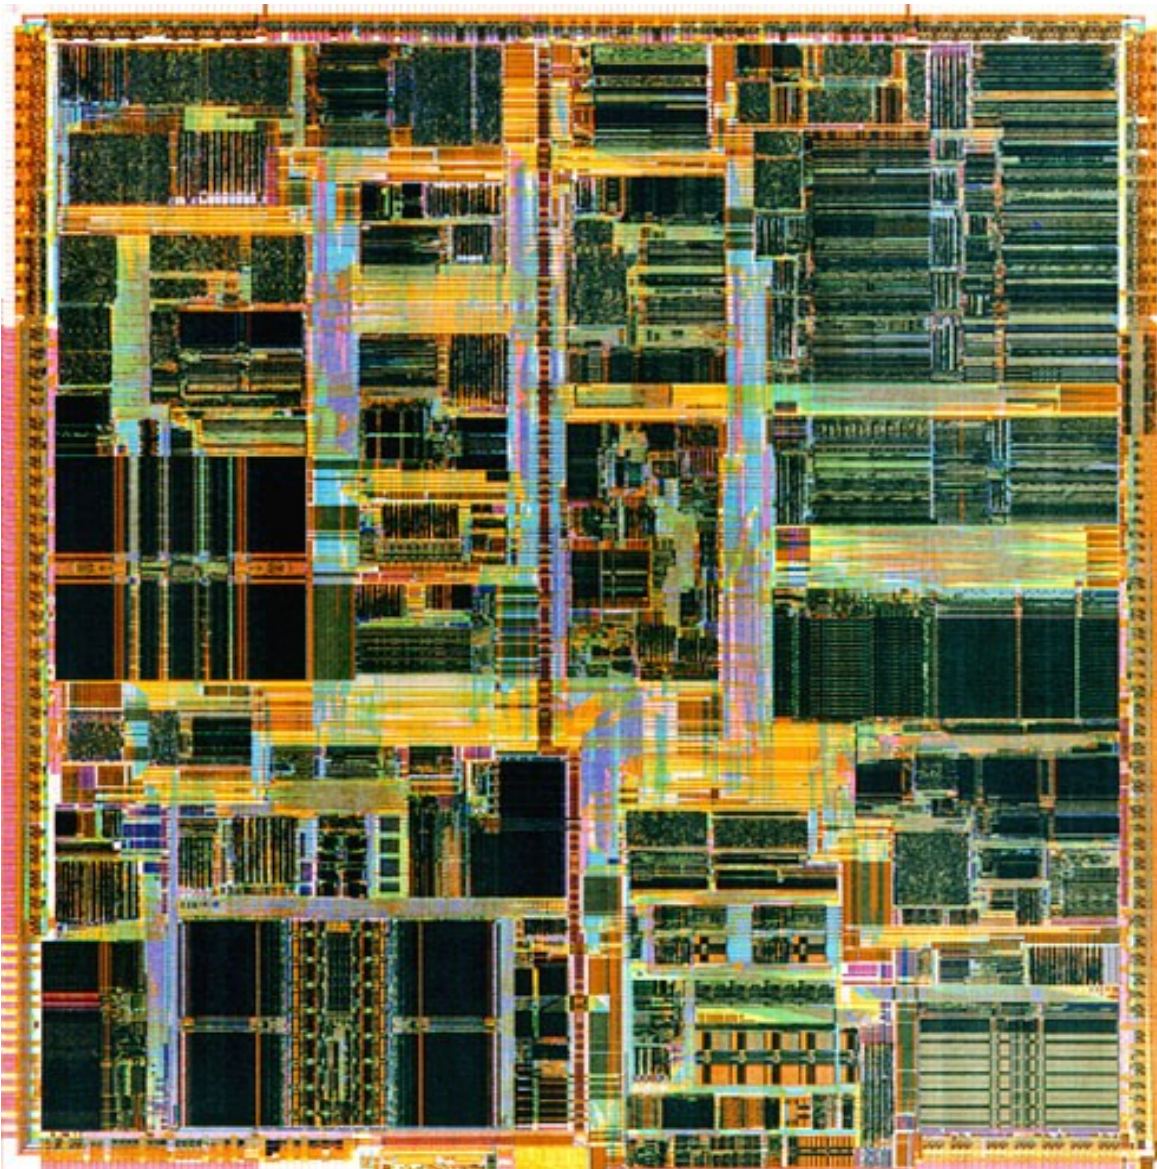

2001

30 ($\sim 2^5$) years

1.7 GHz clock

8500x faster

271 mm² die

90x bigger die

180 nm feature size

55x smaller

~ 42 M transistors

18,000x more T's

64W power

32,000x (2^{15}) more
power

Technology scaling road map (ITRS)


Year	2004	2006	2008	2010	2012
Feature size (nm)	90	65	45	32	22
Intg. Capacity (BT)	2	4	6	16	32

❑ Fun facts about 45nm transistors

- 30 million can fit on the head of a pin
- You could fit more than 2,000 across the width of a human hair
- If car prices had fallen at the same rate as the price of a single transistor has since 1968, a new car today would cost about 1 cent

Another Example of Moore's Law Impact

DRAM capacity growth over 3 decades

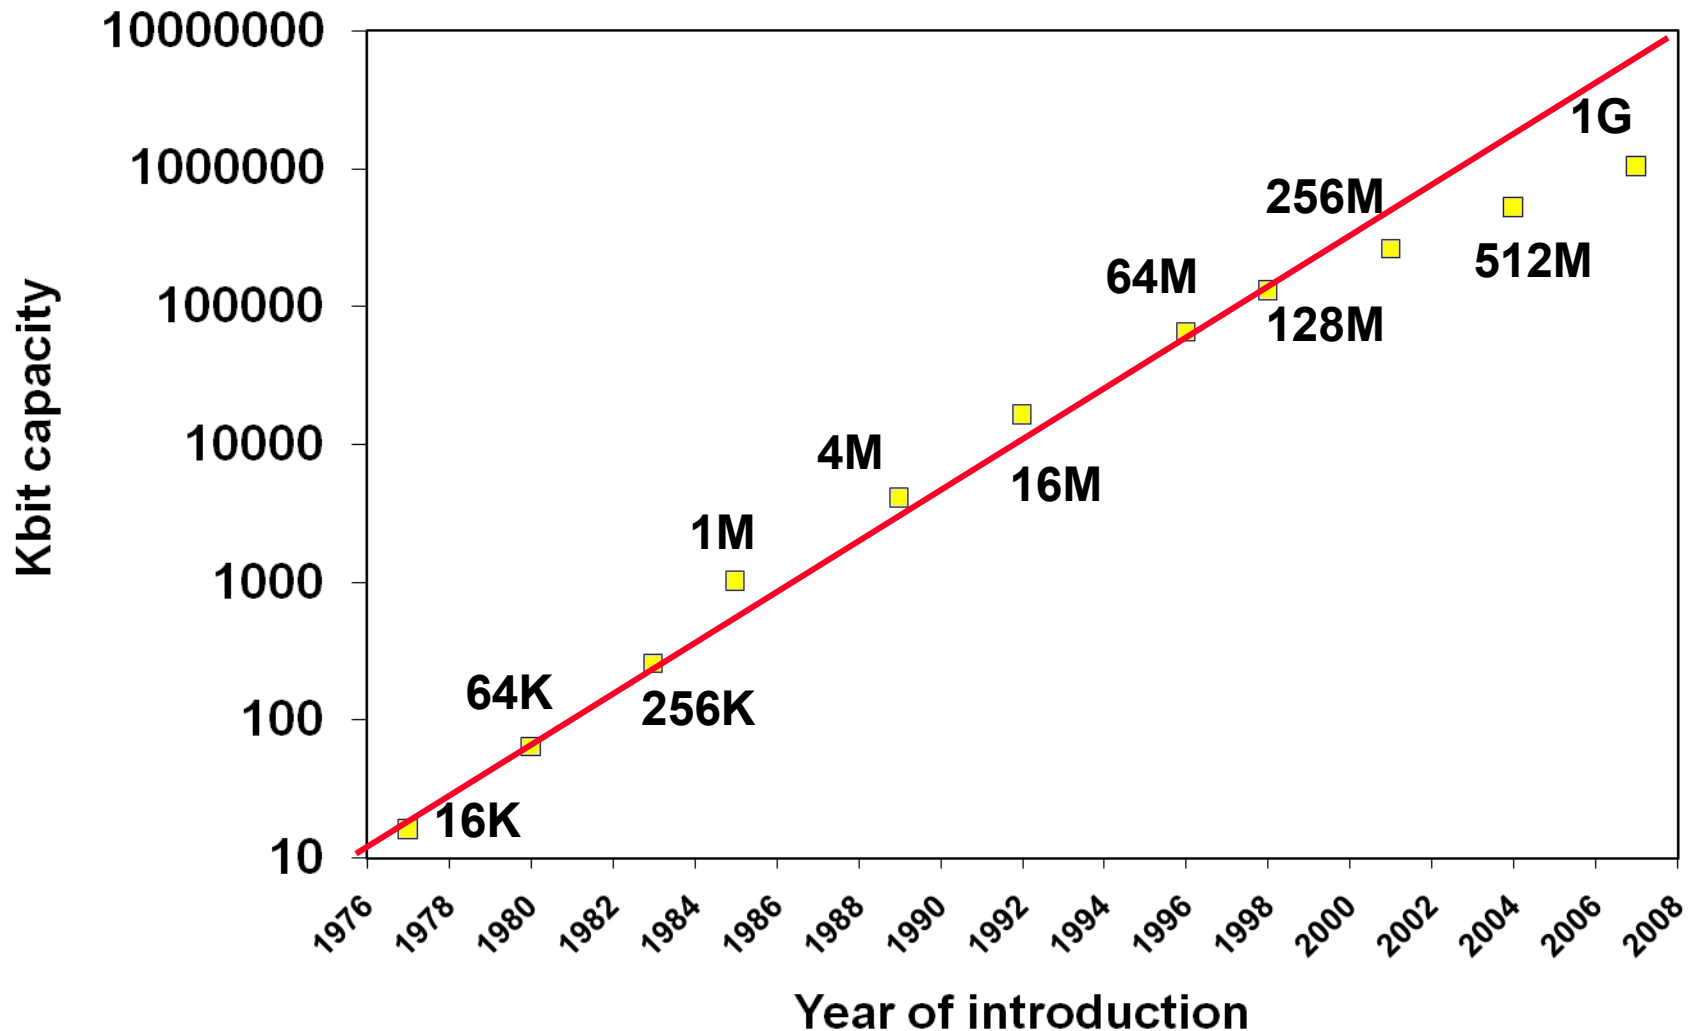


But There Is Wirth's Law ...

- ❑ Niklaus Wirth, the famous software designer, once observed:

Software is getting slower more rapidly than hardware becomes faster.

- ❑ There are a number of variants, attributed to people such as Larry Page and Bill Gates, among others.

But What Happened to Clock Rates and Why?

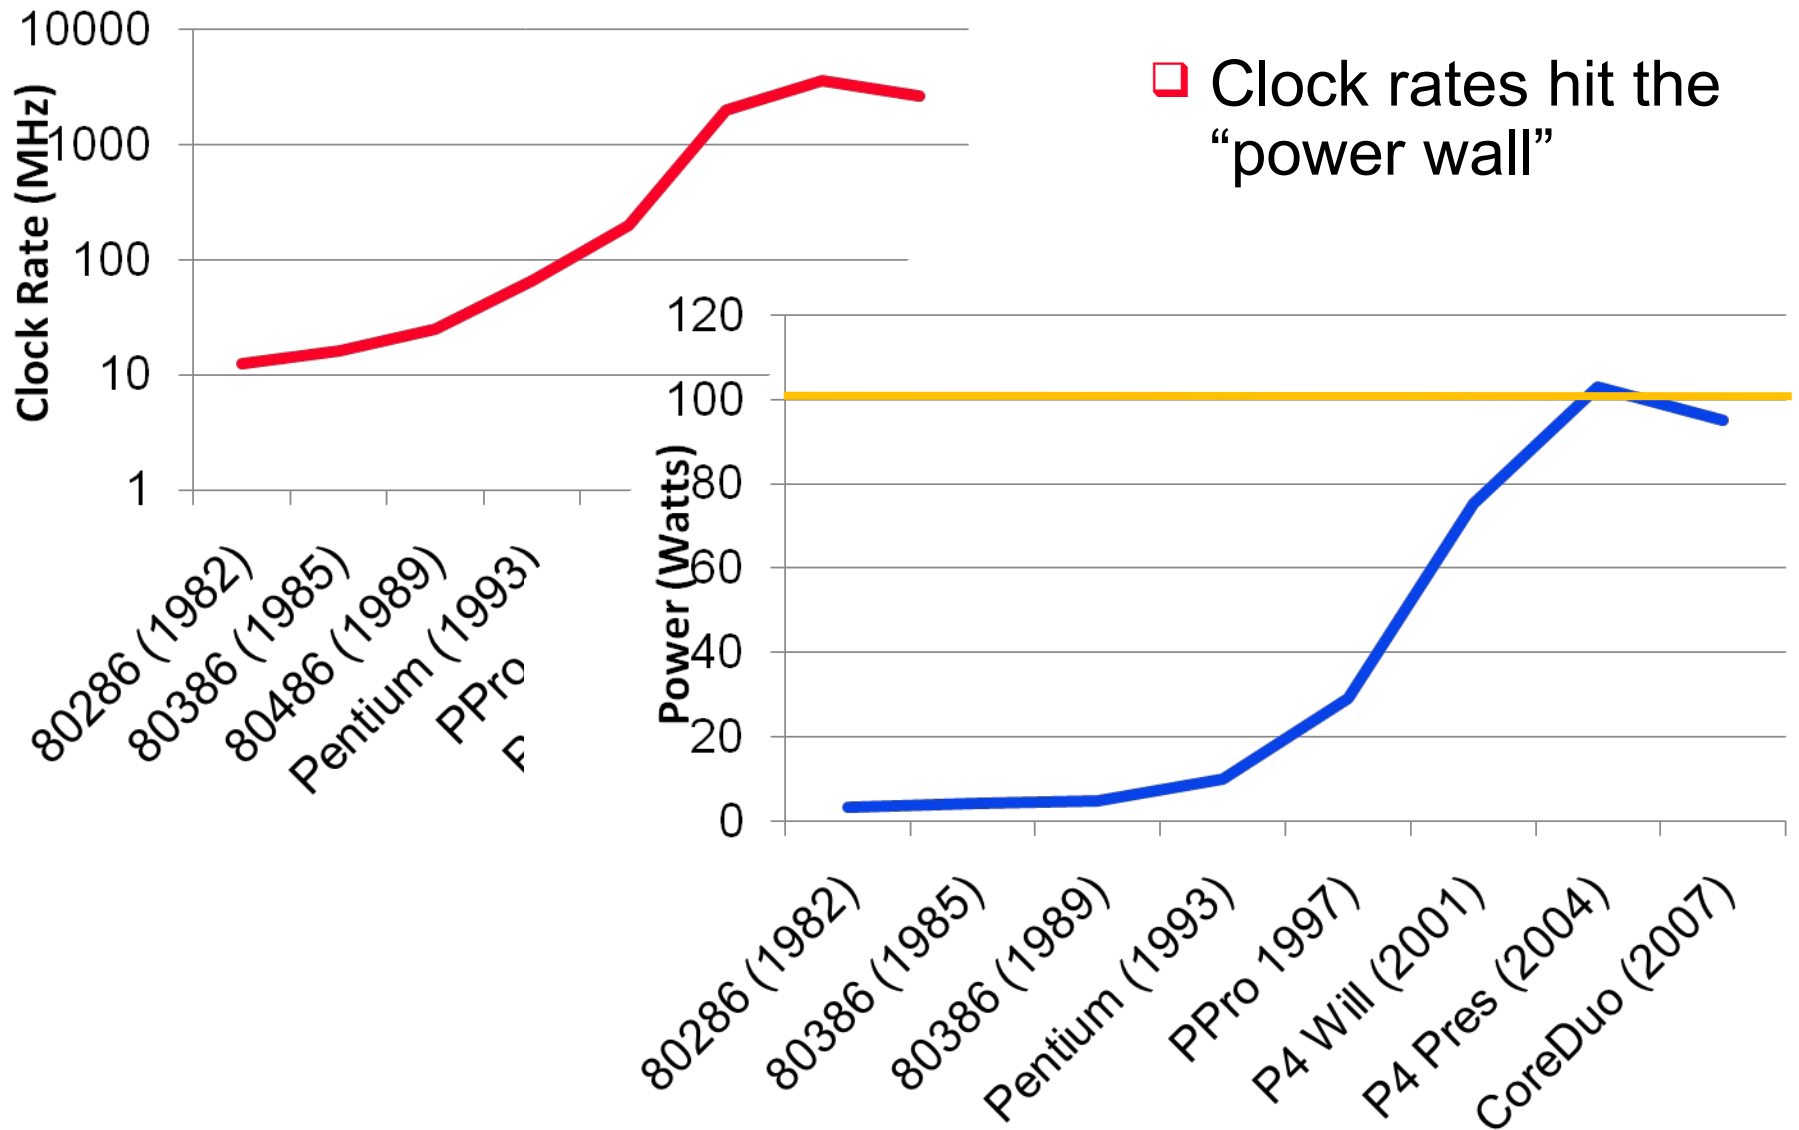


A Sea Change is at Hand

- ❑ The power challenge has forced a change in the design of microprocessors
 - Since 2002 the rate of improvement in the response time of programs on desktop computers has slowed from a factor of 1.5 per year to less than a factor of 1.2 per year
- ❑ As of 2006 all desktop and server companies are shipping microprocessors with multiple processors – cores – per chip

Product	AMD Barcelona	Intel Nehalem	IBM Power 6	Sun Niagara 2
Cores per chip	4	4	2	8
Clock rate	2.5 GHz	~2.5 GHz?	4.7 GHz	1.4 GHz
Power	120 W	~100 W?	~100 W?	94 W

- ❑ Plan of record is to double the number of cores per chip per generation (about every two years)

AMD's Barcelona Multicore Chip (Sept. 2007)

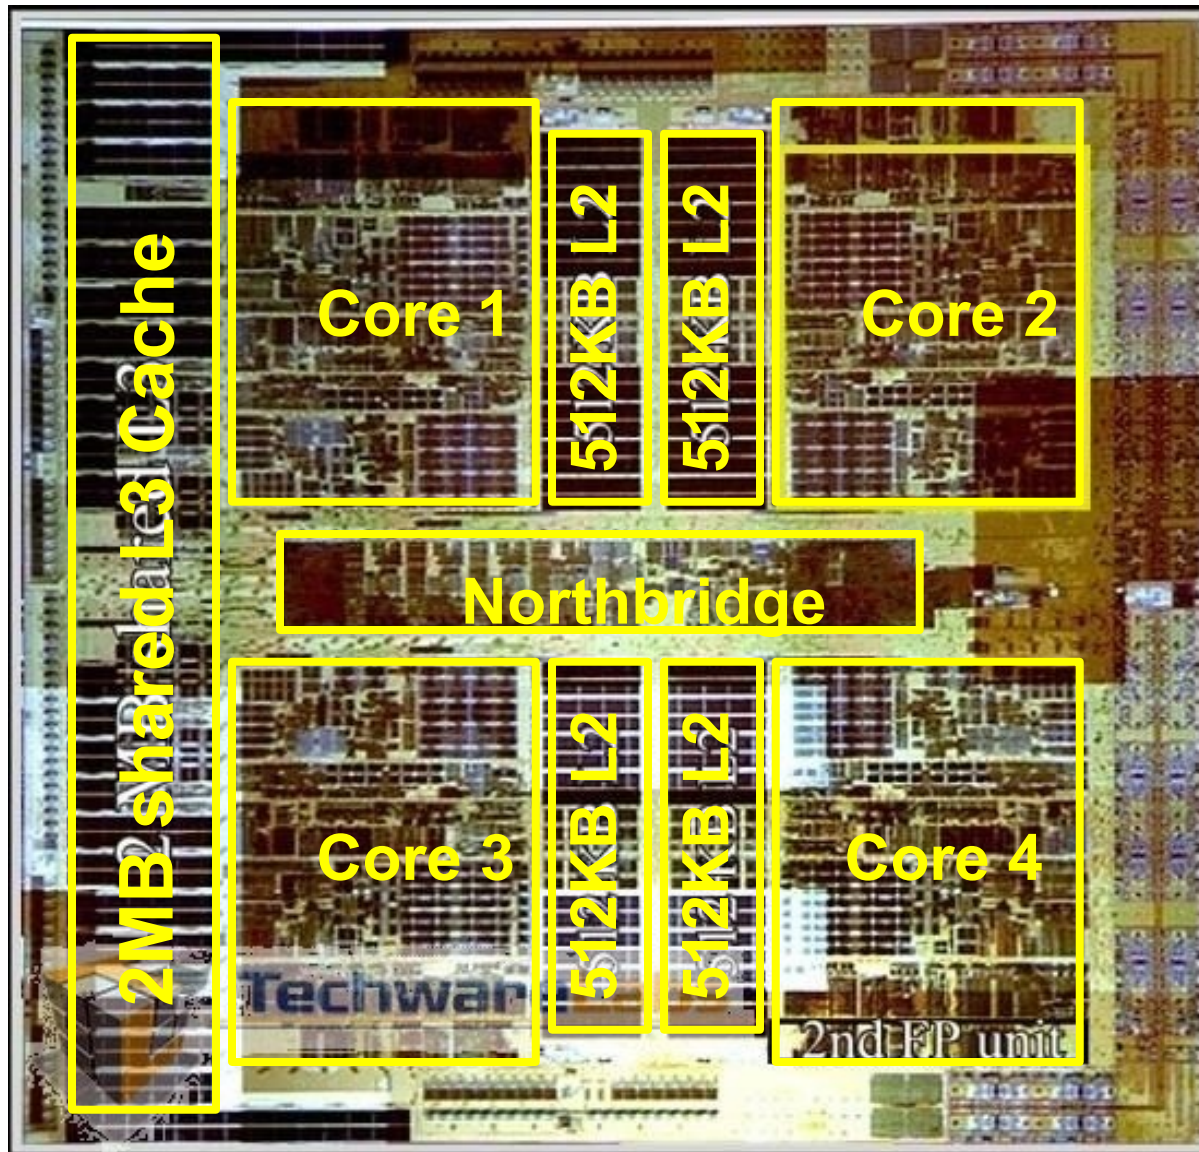

- ❑ Four out-of-order cores on one chip
- ❑ 1.9 GHz clock rate
- ❑ 65nm technology
- ❑ Three levels of caches (L1, L2, L3) on chip
- ❑ Integrated Northbridge

The Oracle/(Sun) SPARC T4 (2011)

- ❑ Example of a modern high-end processor
 - 8 cores, up to 8 threads per core = 64 threads total
 - Scalability up to 4 sockets with no additional silicon necessary
 - Die size 403 mm²
 - Core size 15.4mm²
 - 2.85 – 3.0 GHz
 - 40 nm
 - Caches:
 - L1: 16KB instruction, 16KB data, per core
 - L2: 128KB, per core
 - L3: 4MB, 8 banks, 16-way set-associative, unified
 - On-chip encryption hardware
 - On-chip PCIe
 - TDP (Total Power Dissipation) 240 Watts maximum

The AMD Fusion Series (2011 -)

- ❑ A series of APUs (Accelerated Processing Units)
- ❑ Processor(s) plus GPU (Graphics Processing Unit) on one chip
- ❑ Variants:

Classification	Application	TDP	Fab	Cores	Clock GHz
Desktop	workstation	65-100 W	32nm	2-4	2.1-3.0
Mobile	laptop	35-45 W	32nm	2-4	1.8-1.9
Ultra-portable	netbook	9-18 W	40nm	1-2	1.5-1.65

- ❑ Example: E-350 Zacate codename, ultra-portable
 - January 2011
 - 2 cores, 1.6 GHz, 18W, 40 nm
 - 512KB 16-way L2 cache per core
 - HD 6310 GPU

Performance Metrics

❑ Purchasing perspective

- given a collection of machines, which has the
 - best performance ?
 - least cost ?
 - best cost/performance?

❑ Design perspective

- faced with design options, which has the
 - best performance improvement ?
 - least cost ?
 - best cost/performance?

❑ Both require

- basis for comparison
- metric for evaluation

❑ Our goal is to understand what factors in the architecture contribute to overall system performance and the relative importance (and cost) of these factors

Throughput versus Response Time

- ❑ Response time (execution time) – the time between the start and the completion of a task
 - Important to individual users
- ❑ Throughput (bandwidth) – the total amount of work done in a given time
 - Important to data center managers
- ❑ Will need different performance metrics as well as a different set of applications to benchmark **embedded** and **desktop** computers, which are more focused on response time, versus **servers**, which are more focused on throughput

Defining (Speed) Performance

- ❑ To maximize performance, need to **minimize** execution time

$$\text{performance}_x = 1 / \text{execution_time}_x$$

If X is n times as fast as Y, then

$$\frac{\text{performance}_x}{\text{performance}_y} = \frac{\text{execution_time}_y}{\text{execution_time}_x} = n$$

- ❑ Decreasing response time almost always improves throughput

A Relative Performance Example

- ❑ If computer A runs a program in 10 seconds and computer B runs the same program in 15 seconds, how much faster is A than B?

A Relative Performance Example

- If computer A runs a program in 10 seconds and computer B runs the same program in 15 seconds, how much faster is A than B?

We know that A is n times as fast as B if

$$\frac{\text{performance}_A}{\text{performance}_B} = \frac{\text{execution_time}_B}{\text{execution_time}_A} = n$$

The performance ratio is $\frac{15}{10} = 1.5$

So A is 1.5 times as fast as B (or A is 50% faster than B).

Performance Factors

- ❑ CPU execution time (CPU time) – time the CPU spends working on a task
 - Does not include time waiting for I/O or running other programs

$$\text{CPU execution time for a program} = \frac{\# \text{ CPU clock cycles for a program}}{\text{clock cycle}}$$

or


$$\text{CPU execution time for a program} = \frac{\# \text{ CPU clock cycles for a program}}{\text{clock rate}}$$

- ❑ Can improve performance by reducing either the **length of the clock cycle** or the **number of clock cycles required for a program**

Review: Machine Clock Rate

- ❑ Clock rate (clock cycles per second in MHz or GHz) is inverse of clock cycle time (clock period)

$$CC = 1 / CR$$

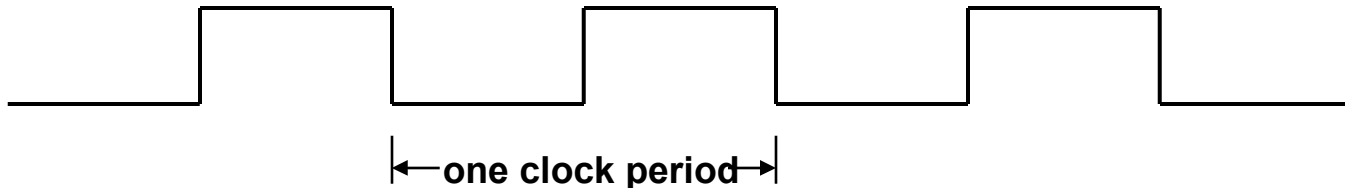

10 nsec clock cycle => 100 MHz clock rate

5 nsec clock cycle => 200 MHz clock rate

2 nsec clock cycle => 500 MHz clock rate

1 nsec (10^{-9}) clock cycle => 1 GHz (10^9) clock rate

500 psec clock cycle => 2 GHz clock rate

250 psec clock cycle => 4 GHz clock rate

200 psec clock cycle => 5 GHz clock rate

Improving Performance Example

- ❑ A program runs on computer A with a 2 GHz clock in 10 seconds. What clock rate must a computer B run at to run this program in 6 seconds? Unfortunately, to accomplish this, computer B will require 1.2 times as many clock cycles as computer A to run the program.

Improving Performance Example

- A program runs on computer A with a 2 GHz clock in 10 seconds. What clock rate must computer B run at to run this program in 6 seconds? Unfortunately, to accomplish this, computer B will require 1.2 times as many clock cycles as computer A to run the program.

$$\text{CPU time}_A = \frac{\text{CPU clock cycles}_A}{\text{clock rate}_A}$$

$$\begin{aligned}\text{CPU clock cycles}_A &= 10 \text{ sec} \times 2 \times 10^9 \text{ cycles/sec} \\ &= 20 \times 10^9 \text{ cycles}\end{aligned}$$

$$\text{CPU time}_B = \frac{1.2 \times 20 \times 10^9 \text{ cycles}}{\text{clock rate}_B}$$

$$\text{clock rate}_B = \frac{1.2 \times 20 \times 10^9 \text{ cycles}}{6 \text{ seconds}} = 4 \text{ GHz}$$

Clock Cycles per Instruction

- ❑ Not all instructions take the same amount of time to execute
 - One way to think about execution time is that it equals the number of instructions executed multiplied by the average time per instruction

$$\begin{array}{l} \# \text{ CPU clock cycles} \\ \text{for a program} \end{array} = \begin{array}{l} \# \text{ Instructions} \\ \text{for a program} \end{array} \times \begin{array}{l} \text{Average clock cycles} \\ \text{per instruction} \end{array}$$

- ❑ **Clock cycles per instruction** (CPI) – the average number of clock cycles each instruction takes to execute
 - A way to compare two different implementations of the same ISA

	CPI for this instruction class		
	A	B	C
CPI	1	2	3

Using the Performance Equation

- ❑ Computers A and B implement the same ISA. Computer A has a clock cycle time of 250 ps and an effective CPI of 2.0 for some program and computer B has a clock cycle time of 500 ps and an effective CPI of 1.2 for the same program. Which computer is faster and by how much?

Using the Performance Equation

- ❑ Computers A and B implement the same ISA. Computer A has a clock cycle time of 250 ps and an effective CPI of 2.0 for some program and computer B has a clock cycle time of 500 ps and an effective CPI of 1.2 for the same program. Which computer is faster and by how much?

Each computer executes the same number of instructions, I , so

$$\text{CPU time}_A = I \times 2.0 \times 250 \text{ ps} = 500 \times I \text{ ps}$$

$$\text{CPU time}_B = I \times 1.2 \times 500 \text{ ps} = 600 \times I \text{ ps}$$

Clearly, A is faster ... by the ratio of execution times

$$\frac{\text{performance}_A}{\text{performance}_B} = \frac{\text{execution_time}_B}{\text{execution_time}_A} = \frac{600 \times I \text{ ps}}{500 \times I \text{ ps}} = 1.2$$

Effective (Average) CPI

- ❑ Computing the overall effective CPI is done by looking at the different types of instructions and their individual cycle counts and averaging

$$\text{Overall effective CPI} = \sum_{i=1}^n (\text{CPI}_i \times \text{IC}_i)$$

- Where IC_i is the count (percentage) of the number of instructions of class i executed
 - CPI_i is the (average) number of clock cycles per instruction for that instruction class
 - n is the number of instruction classes
- ❑ The overall effective CPI varies by instruction mix – a measure of the dynamic frequency of instructions across one or many programs

THE Performance Equation

- Our basic performance equation is then

$$\text{CPU time} = \text{Instruction_count} \times \text{CPI} \times \text{clock_cycle}$$

or

$$\text{CPU time} = \frac{\text{Instruction_count} \times \text{CPI}}{\text{clock_rate}}$$

- These equations separate the **three key** factors that affect performance
 - Can measure the CPU execution time by running the program
 - The clock rate is usually given
 - Can measure overall instruction count by using profilers/simulators without knowing all of the implementation details
 - CPI varies by instruction type and ISA implementation for which we must know the implementation details

Determinates of CPU Performance

$$\text{CPU time} = \text{Instruction_count} \times \text{CPI} \times \text{clock_cycle}$$

	Instruction_count	CPI	clock_cycle
Algorithm			
Programming language			
Compiler			
ISA			
Core organization			
Technology			

Determinates of CPU Performance

$$\text{CPU time} = \text{Instruction_count} \times \text{CPI} \times \text{clock_cycle}$$

	Instruction_count	CPI	clock_cycle
Algorithm	X	X	
Programming language	X	X	
Compiler	X	X	
ISA	X	X	X
Core organization		X	X
Technology			X

A Simple Example

Op	Freq	CPI _i	Freq x CPI _i
ALU	50%	1	.
Load	20%	5	
Store	10%	3	
Branch	20%	2	
			$\Sigma =$

- ❑ How much faster would the machine be if a better data cache reduced the average load time to 2 cycles?
- ❑ How does this compare with using branch prediction to shave a cycle off the branch time?
- ❑ What if two ALU instructions could be executed at once?

A Simple Example

Op	Freq	CPI _i	Freq x CPI _i			
ALU	50%	1	.5	.5	.5	.25
Load	20%	5	1.0	.4	1.0	1.0
Store	10%	3	.3	.3	.3	.3
Branch	20%	2	.4	.4	.2	.4
		$\Sigma =$	2.2	1.6	2.0	1.95

- How much faster would the machine be if a better data cache reduced the average load time to 2 cycles?

CPU time new = 1.6 x IC x CC so 2.2/1.6 means 37.5% faster

- How does this compare with using branch prediction to shave a cycle off the branch time?

CPU time new = 2.0 x IC x CC so 2.2/2.0 means 10% faster

- What if two ALU instructions could be executed at once?

CPU time new = 1.95 x IC x CC so 2.2/1.95 means 12.8% faster

Workloads and Benchmarks

- ❑ Benchmarks – a set of programs that form a “workload” specifically chosen to measure performance
- ❑ SPEC (System Performance Evaluation Cooperative) creates standard sets of benchmarks starting with SPEC89. The latest is SPEC CPU2006 which consists of 12 integer benchmarks (CINT2006) and 17 floating-point benchmarks (CFP2006).

www.spec.org

- ❑ There are also benchmark collections for power workloads (SPECpower_ssj2008), for mail workloads (SPECmail2008), for multimedia workloads (mediabench),

...

SPEC CINT2006 on Barcelona (CC = 0.4 x 10⁹)

Name	ICx10 ⁹	CPI	ExTime	RefTime	SPEC ratio
perl	2,1118	0.75	637	9,770	15.3
bzip2	2,389	0.85	817	9,650	11.8
gcc	1,050	1.72	724	8,050	11.1
mcf	336	10.00	1,345	9,120	6.8
go	1,658	1.09	721	10,490	14.6
hmmer	2,783	0.80	890	9,330	10.5
sjeng	2,176	0.96	837	12,100	14.5
libquantum	1,623	1.61	1,047	20,720	19.8
h264avc	3,102	0.80	993	22,130	22.3
omnetpp	587	2.94	690	6,250	9.1
astar	1,082	1.79	773	7,020	9.1
xalancbmk	1,058	2.70	1,143	6,900	6.0
Geometric Mean					11.7

Comparing and Summarizing Performance


- How do we summarize the performance for benchmark set with a **single** number?
 - First the execution times are normalized giving the “SPEC ratio” (bigger is faster, i.e., SPEC ratio is the inverse of execution time)
 - The SPEC ratios are then “averaged” using the **geometric mean** (GM)

$$GM = \sqrt[n]{\prod_{i=1}^n \text{SPEC ratio}_i}$$

- Guiding principle in reporting performance measurements is **reproducibility** – list everything another experimenter would need to duplicate the experiment (version of the operating system, compiler settings, input set used, specific computer configuration (clock rate, cache sizes and speed, memory size and speed, etc.))


Other Performance Metrics

- ❑ Power consumption – especially in the embedded market where battery life is important
 - For power-limited applications, the most important metric is energy efficiency

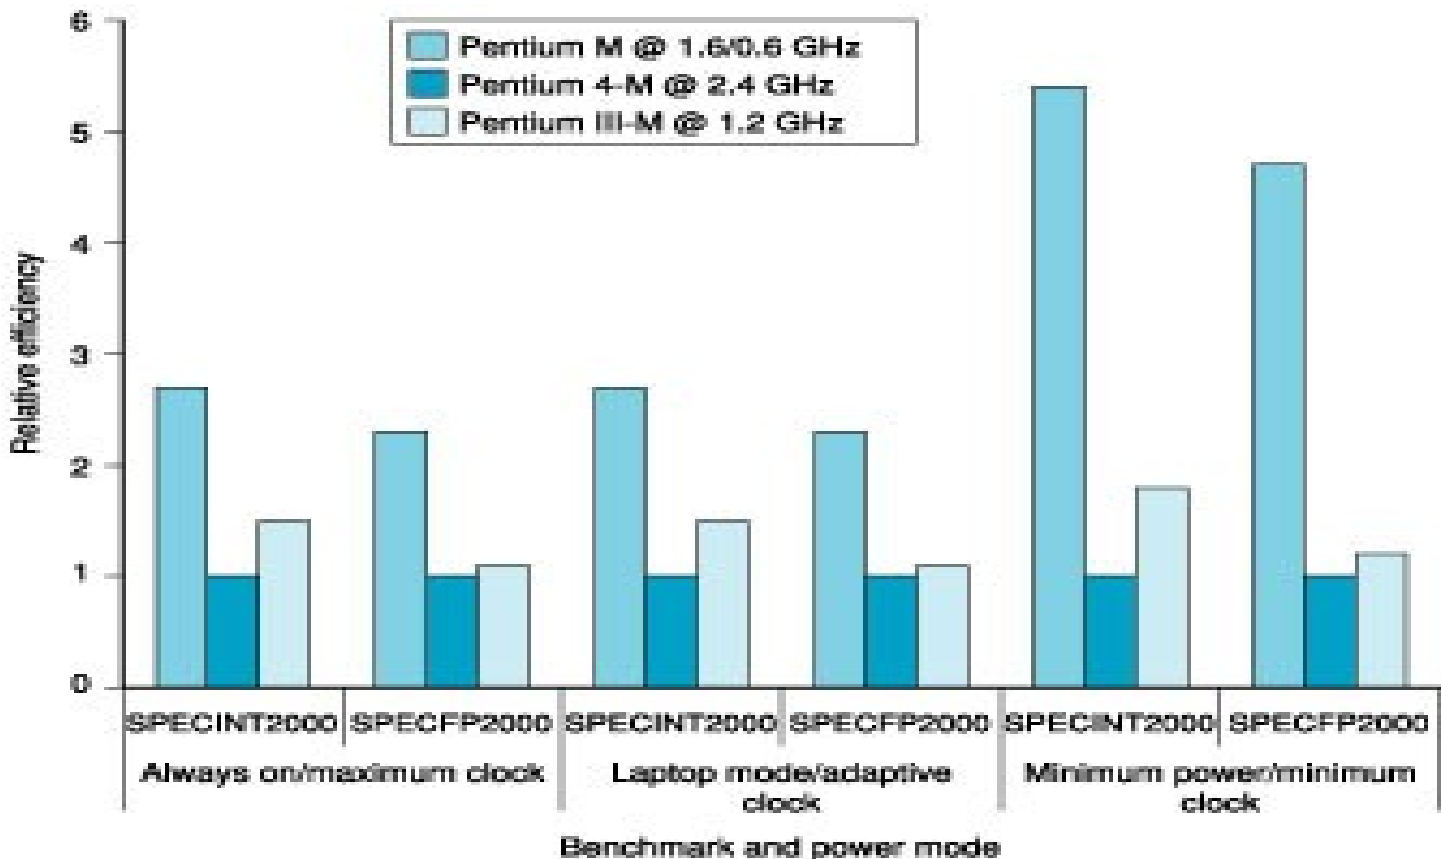

Growth in Cell Phone Sales (Embedded)

embedded growth >> desktop growth

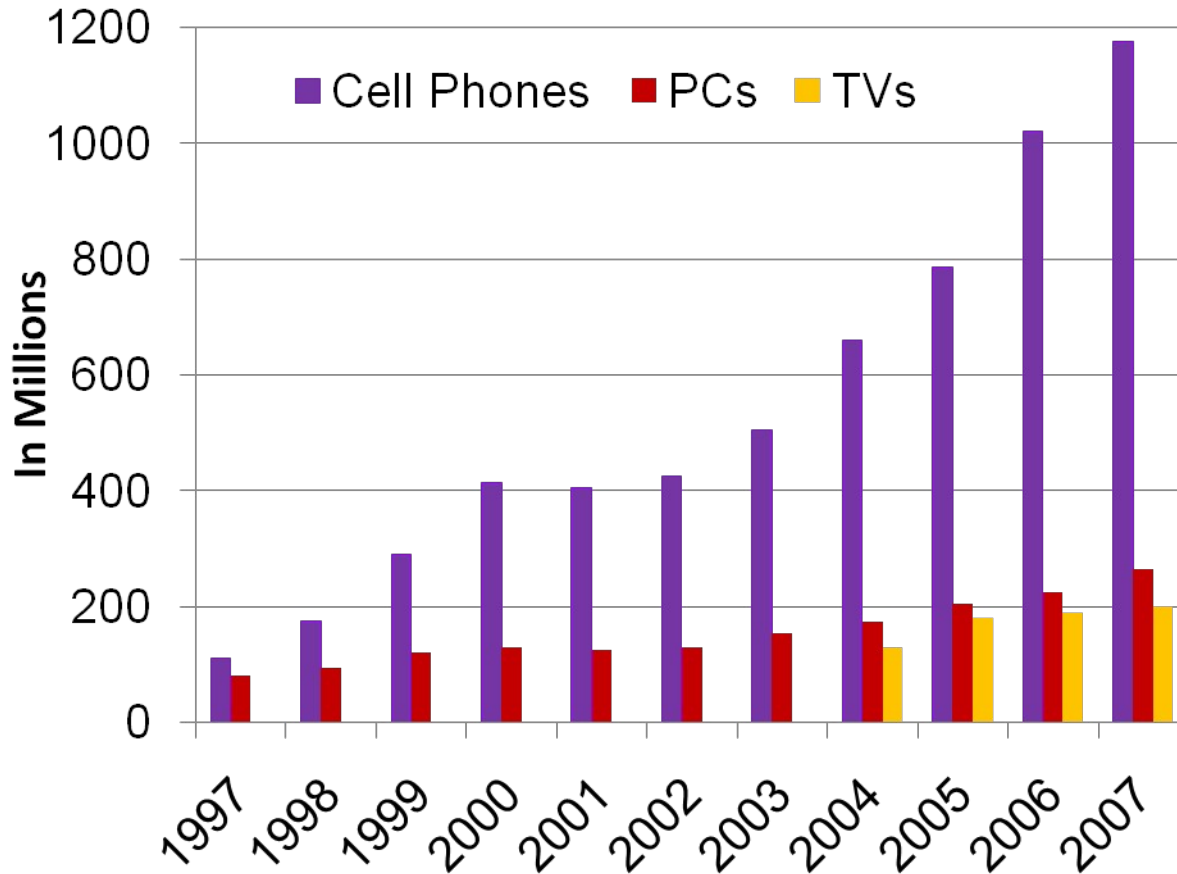

□ Where else are embedded processors found?

Summary: Evaluating ISAs

❑ Design-time metrics:

- Can it be implemented, in how long, at what cost?
- Can it be programmed? Ease of compilation?

❑ Static Metrics:

- How many bytes does the program occupy in memory?

❑ Dynamic Metrics:

- How many instructions are executed? How many bytes does the processor fetch to execute the program?
- How many clocks are required per instruction?
- How "lean" a clock is practical?

Best Metric: Time to execute the program!

depends on the instructions set, the processor organization, and compilation techniques.

